

# 10X18.5CM 车位正上方1.2cm

## Easy Fold Stretcher Tent Single



1. Select a sheltered site, clear a level area of all stones, twigs, etc. Remove the Stretcher Tent from the carry bag. Stand the compressed Stretcher Tent on its feet facing the desired position. Slowly expand each leg making sure the scissor-action struts open evenly and smoothly. It will be necessary to move from end to end during the opening of the Stretcher Tent. If the strut seems stiff, do not force the Stretcher Tent, check and make sure that you are opening the Stretcher Tent square and evenly. Please take care the feet are not catching on the ground preventing a smooth opening operation.

2. When the Stretcher Tent base is fully expanded, extend the telescopic front wall poles to the maximum height.

**Helpful Hint:** It is not necessary at any stage of assembly to apply more than a small force on the frame. If a small force is not sufficient to carry out each described step, then re-align and try again. To prevent damage it is important not to drop the Easy Fold Stretcher Tent.

3. Remove the Fly from the carry bag and place over the roof frame of the Stretcher Tent. Secure the Fly to the Stretcher Tent by attaching the "J" hooks at each of the base corners of the fly to the frame adjacent to the corner foot.

To pack away, simply reverse the above process, noting to release the telescopic front wall pole.

### No assembly needed, ready in 10 seconds



set up 1




set up 2



set up 3



set up 4

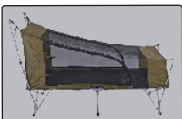

set up 5



Fly Sheet

### Designed & Imported by:

OZtrail Leisure Products

71 Charles Ulm Place Eagle Farm QLD 4009 AUSTRALIA

[www.oztrail.com.au](http://www.oztrail.com.au)

Made in China