

# GEAR FOR LIFE

## SEAT COVER INSTALLATION INSTRUCTIONS

#### **CONGRATULATIONS ON YOUR PURCHASE**

of MSA 4x4 Accessories polycotton lined canvas seat covers! When installed correctly MSA 4x4 seat covers will not move and provide long lasting comfort and protection for your vehicle's seats. To ensure you get a perfect fit our seat covers are made extremely neat & tight. This means they will take a little longer to fit. Please allow 20 minutes per row to install.

Driver & Passenger seats marked on the underside of seat cover. (307)

# TOYOTA HI-LUX SR& SR5 FRONT ROW TWIN BUCKETS WITH AIRBAGS.

MODEL NO: HI 65 - ADR CERTIFIED AIRBAG COMPATIBLE

- 1 Remove head rest.
- At the bottom of the backrest is a flap that is attached underneath the seat base by an elastic strap over plastic hooks. Release the elastic from the hooks and let the flap hang down.
- 3 Slip top part of cover over seat and pull down half way. Undo Velcro at lower part on back of cover so that cover will go over seat bolsters. Make sure that the flap is folded back up against the back of the seat and pull the cover all the way down so it goes over the top of this flap. Pull down firmly.
- 4 Mark sure backrest covers are pulled down on shoulders of seat.
- Push through excess flap at front of seat through to back between upper and lower seat.

  VERY IMPORTANT: THE YELLOW WIRE IS THE AIRBAG ACTIVATION WIRE.

  BE VERY CAREFULL NOT TO DAMAGE THIS WIRE.
- From behind the front seat pull flap through to back, and then up hard, and re-attach velcro at the back plus any tabs from the side. Refit head rests.
- On the back of the seat cover backrest is a flap with an elastic loop. Reattach the elastic over the plastic hooks under the seat where the original elastic came off.
- 8 Place seat base cover over the front edge of the seat and position neatly on the seat base
- 9 Push through the two back straps and excess cover to back of seat between upper and lower seat
- 10 From behind the front seat pull straps and fabric through to back hard

CONTINUED ON REVERSE...



### **GEAR FOR LIFE**

### **SEAT COVER INSTALLATION INSTRUCTIONS**

- After ensuring seat base is still neatly in position, attach front to back side release buckles under seat.
- Attach left to right side release buckles at front of seat base in between the plastic trim and then repeat process with the Velcro strap in between plastic trim.
- Where applicable feed side straps down under sides of seat between the seat slider and seat base and attach under seat being careful not to interfere with seat sliding action.
- 14 Ensure seat cover is a neat fit all round and adjust if necessary.

