

W a n d e r e r 
INSTRUCTION MANUAL



PLU: 671679
**QUICK SETUP
CENTRAL LOCKING GAZEBO
3 X 3M**


PLU: 671679
CODE: DR-CL601
Manufactured and packaged for
SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue
Strathpine QLD 4500, Australia
MADE IN CHINA

WARNING:


- Keep all flame and heat sources away from this gazebo. The fabric will burn if left in continuous contact with any flame source. Do not build fires under the canopy top.
- **Always peg down and secure your gazebo with guy ropes. It's crucial to do this any time you have the gazebo up to minimize the impact of unexpected wind gusts.**
- The gazebo is designed to provide temporary shade. Do not use this gazebo in windy or rain conditions. Wind can damage the gazebo and could result in injury to you and others. Fold and pack away the gazebo before extreme weather events. Always peg or weigh down gazebo once set up. This gazebo is NOT a permanent structure.
- Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts as frame opens and closes.
- This gazebo is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure. Do not leave up for extended periods and do not leave the gazebo unattended. Take down the gazebo and store away after use.
- Do not use your gazebo in lightning storms or in extreme weather conditions.
- The set up of this gazebo requires a minimum of two people. Keep children away from the set up area.

CARE AND MAINTENANCE:

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.

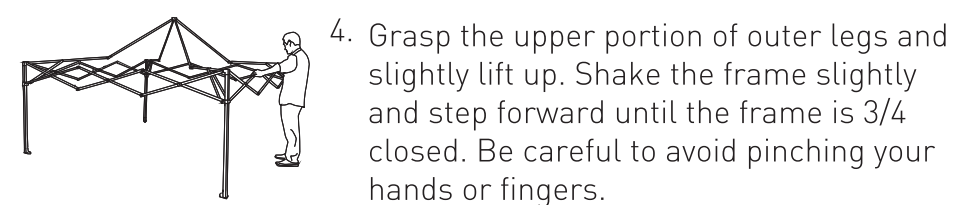


4. Grasp the upper portion of outer legs and slightly lift up. Shake the frame slightly and step forward until the frame is 3/4 closed. Be careful to avoid pinching your hands or fingers.

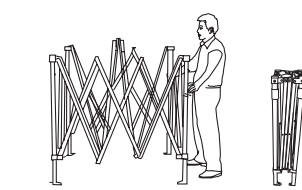

5. Grasp the adjacent outer legs and push the unit together until fully closed. Be careful not to pinch your fingers! And then return your folded pop up gazebo to the bag for storage.



6. Stand the closed frame on the ground, and pull the storage bag top down over the frame. Carefully lay down the storage bag, then flip the bottom on and zip the storage bag completely shut. Please do not drop the frame during the process to avoid damage the frame. Be sure the gazebo is completely dry before storage.

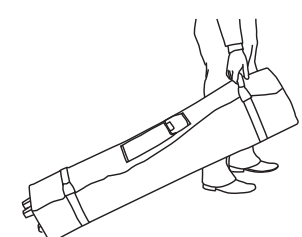


7. Wheel your gazebo to your desired storage area.


SET-UP INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP.

NOTE:
Canopy should be attached and un-attached with every use, to avoid fabric rubbing through when transported.

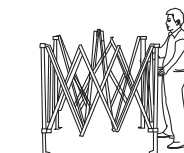




1. Stand frame upright. Starting at the corners, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.

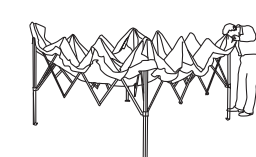


2. Place the main canopy over the top frame. Use the Velcro pads to secure each corner of the canopy to the frame under the plastic leg caps.




3. Go under the gazebo and lift the central hub till it clicks into the central pole. If the gazebo is too tight to lift it up, hold the central pole by another hand for assistance.

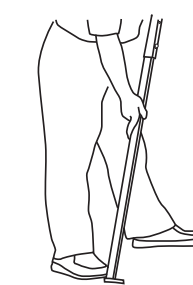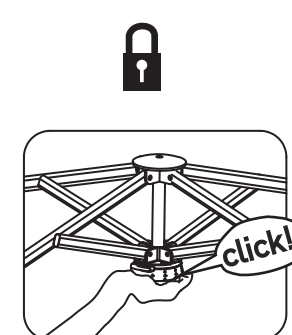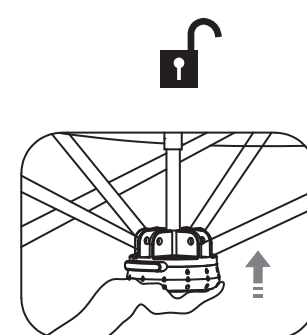

4. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the other two legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the snap button at knuckle and slowly pull out the inner leg till the snap button pops in next position. Repeat on the other legs. Be careful do not overpull the leg and exceed maximum height.

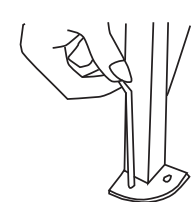


5. Peg down the gazebo by driving the 4 pegs through one of the holes on the base of each foot. This will keep the leg from moving sideways in mild weather conditions.

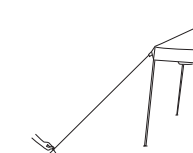

6. Tie up one end of each guy rope to the webbing guy rope holder located on the outside fabric corners. Pull the guy rope out from the corner of the gazebo towards the ground at a 45 degree angle. Hammer one of the pegs in to the ground and secure the guy rope firmly to it. Make sure the guy ropes have adequate tension.
THE GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES!

PACK-DOWN INSTRUCTIONS




IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKE-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN.

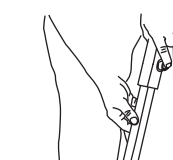

1. Depress snap button on each leg and shorten the frame to its original height prior to extending the legs during set-up.



2. Go under your gazebo, release the central locking. Pull downward the central hub slowly.

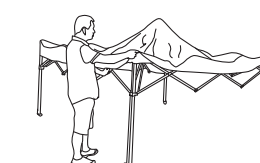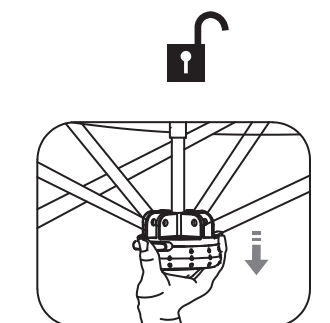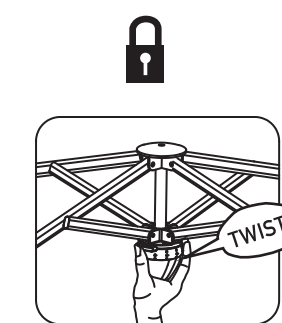

3. Carefully remove the canopy from the frame. Ensure canopy is completely dry before fold and place in bag.