



OWNERS MANUAL

FAST FRAME CABIN 3 PERSON

10001529

BEFORE YOU BEGIN

- This tent requires a minimum of two people to set up
- Read all the instructions before setting up your tent
- Check parts list to ensure you have full contents
- Find a flat area for your tent, free from rocks, potholes and branches
- Ensure that you use all pegs, ropes and additional poles only as instructed
- If conditions are windy, arrange tent to have narrowest side of tent facing into the wind
- Keep away from open flames, DO NOT USE stoves or burning appliances inside the tent

STORAGE

- To maximise the life of your tent, always ensure it is clean of dirt and debris
- Never store if wet or damp. Consider airing your tent at home after your trip and allow to completely dry before storing between trips
- Continued exposure to sunlight can degrade the polyesters used to make tents. Always store your tent in its storage bag, away from direct light in a cool, dry space



DuraPlus vestibule pole x 1:



Steel Awning Pole x 2:



CONTENTS

- Inner tent x 1
- Rain fly x 1
- DuraPlus vestibule pole x 1
- Steel awning poles x 2
- Pegs x 30
- Bags x 3
- Guy ropes x 2

Oztrail® is a registered trademark of
Adventure Trading Australia Pty Ltd

Designed by:
Adventure Trading Australia Pty Ltd
71 Charles Ulm Place,
Eagle Farm, QLD 4009
AUSTRALIA



Made in Bangladesh

SEE OTHER SIDE FOR PITCHING INSTRUCTIONS




OWNERS MANUAL

FAST FRAME CABIN TENT 3 PERSON


10001529

STEP 1: LAYOUT THE INNER TENT

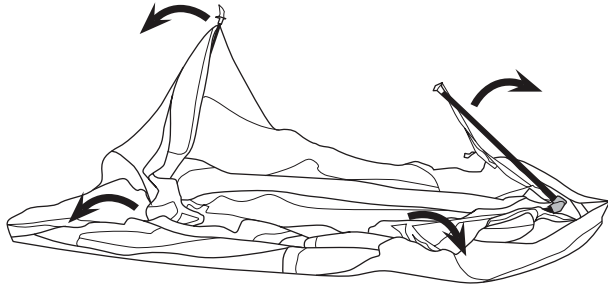


- Unfold the inner tent and outstretch over a flat, clear area
- Arrange the door so it is facing your desired area for entry & exit
- Fold leg poles away from the center of the tent, so the roof framing stands up

STEP 2: ERECT THE INNER TENT FRAME

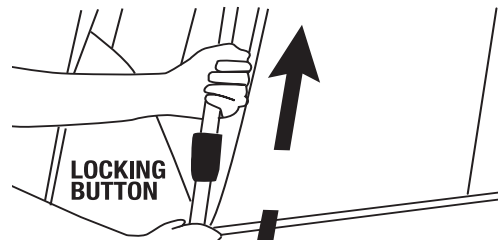

- Locate the lower leg section of the frame
- Raise to near vertical orientation
- Extend middle roof pole until the locking button clicks into the locked position
- Extend the leg section until the locking button clicks into the locked position, repeat on other legs

STEP 3: SET UP VESTIBULE

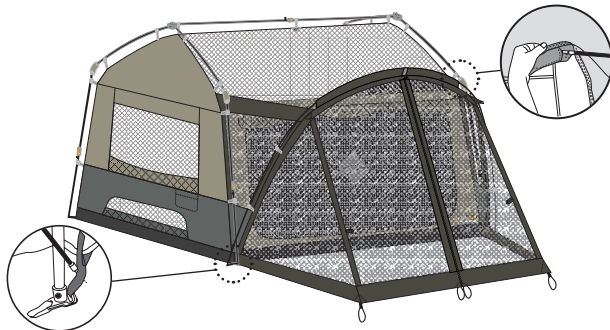


- Place vestibule pole through sleeve located at the front of the inner tent
- Insert vestibule pole into black plastic connector on both sides
- Insert steel portico pole into opposite side of black plastic connector
- Connect base of steel portico pole to ring and pin on grey webbing stitched to inner tent corner

STEP 4: PUT ON FLY AND SECURE TO INNER TENT



- Place rain fly over the inner tent so red webbing on the rain fly faces the rear of the tent
- Secure rain fly to tent with hook and loops tab located on underside of rain fly
- Connect the rain fly to the tent using the red and grey buckles on the corners

STEP 5: SECURE TENT TO GROUND

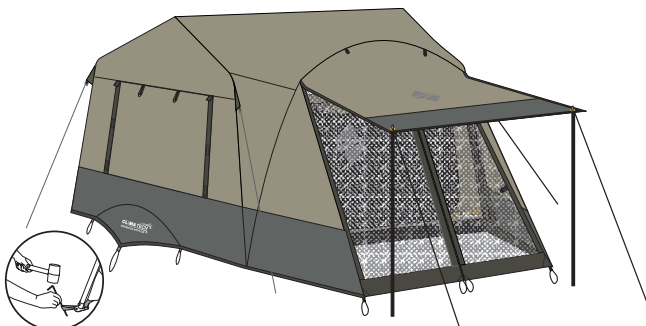

- Pull tent out tight from one corner, peg into the ground then repeat on other corners
- Peg out the tent with all guy ropes around the perimeter
- Assemble awning using door panel, awning poles, ropes and pegs

CHANGING WEATHER CONDITIONS



- In light winds and rainy conditions, awnings must be dismantled, and doors must be closed, and guy ropes must be checked to ensure they're tight
- If weather conditions get worse, the tent needs to be packed away to avoid any damage or injury

PACK UP:

TO TAKE DOWN THE TENT, REVERSE THE PREVIOUS STEPS

SPARE PARTS AND ASSISTANCE - For more details see www.oztrail.com.au

WARRANTY - For details see www.oztrail.com.au/warranty