 


# 18V RECHARGEABLE FAN OPERATION INSTRUCTION

Please read this user manual carefully before use  
and please keep it for future reference.

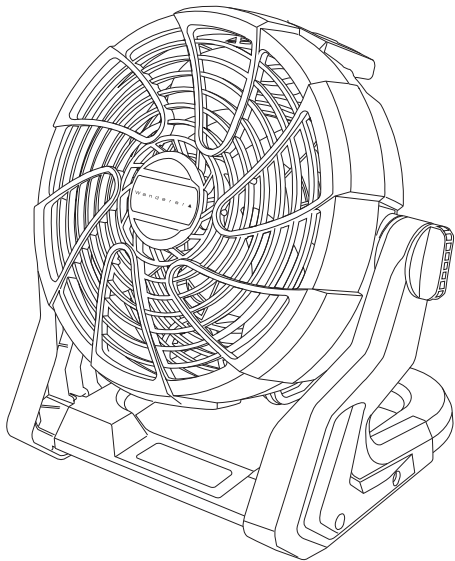

## CONTENTS

SAFETY INFORMATION.....	1
IN THE BOX.....	7
OPERATION INSTRUCTIONS.....	8
CAUTIONS.....	12
MAINTENANCES.....	13
SPECIFICATIONS.....	14
WARRANTY.....	15

## SAFETY INFORMATION

### Warning Symbols:



WARNING: Read the operation's manual



Do not use in the rain or leave outdoors while it is raining.



SWITCH OFF: Remove plug from mains before cleaning or maintenance.



Warning of hazard.



For indoor use only(only for charger).



Positive terminal



Negative terminal



Prevent short circuit and energy discharge.



Intelligent battery pack.  
Do not blend use.



Do not burn.



Do not expose to rain or water.



Class III appliance



The Lithium Ion battery in this product can be a fire hazard when damaged, and should NEVER be placed into recycling or waste bins.

Contact your local council for drop off locations for safe disposal and recycling of this product.



RCM marking.

## General Safety Warnings



**WARNING:** Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

1. This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that do not play with this fan. If the supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard or serious injury.

## Safety Warnings For Fan

1. Do not operate this fan or charger near flammable liquids or in gaseous or explosive atm spheres. Internal sparks may ignite fumes causing personal injury.
2. Do not wash this fan with water or allow water to get inside the fan. Do not submerge this fan in water at anytime.
3. While this fan is in use, do not cover with cloth or other flammable materials due to increased risk of fire.
4. Store this fan indoors when not in use.
5. Make sure extension cord is located so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.

6. Disconnect this fan from the outlet before attempting any cleaning. This will reduce the risk of electric shock. Removing the battery pack will not reduce this risk.
7. Do not use this fan with any solid-state speed control device.
8. When not in use, place this fan on its back on a stable surface where it will not cause a tripping or falling hazard. Some tools with large battery packs will stand upright on the battery pack but may be easily knocked over.
9. The fan is not intended for mounting in outside windows or walls.

## **Safety Warnings For Battery Pack**

1. Do not dismantle, open or shred cells or battery pack.
2. Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box drawer where they may short-circuit each other or be short-circuited by conductive materials. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire. Do not store the battery pack in locations where the temperature may reach or exceed 50°C.
3. Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.
4. Do not subject battery pack to mechanical shock.
5. In the event of battery leaking, do not allow the liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
6. Seek medical advice immediately if a cell or battery pack has been swallowed.

7. Keep battery pack clean and dry.
8. Wipe the battery pack terminals with a clean dry cloth if they become dirty.
9. Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.
10. Do not maintain battery pack on charge when not in use.
11. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
12. Battery pack gives its best performance when it is operated at normal room temperature[25°C+/-5°C].
13. When disposing of battery packs, keep battery packs of different electrochemical systems separate from each other.
14. Recharge only with the charger specified by manufacture. Do not use any charger other than that specifically provided for use with the equipment. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
15. Do not use any battery pack which is not designed for use with the equipment.
16. Keep battery pack out of the reach of children.
17. Retain the original product literature for future reference.
18. Remove the battery from the equipment when not is use.
19. Dispose properly.

## **Additional Safety Instructions For Your Battery Charger**

1. Before charging read the instructions.
2. For charging Li-ion battery pack only.
3. If the supply cord is damaged, it must be replaced by the manufacture,

its service agent or similarly qualified persons in order to avoid a hazard.

4. The battery terminal not connected to the chassis has to be connected first. The other connections is be made to the chassis, remote the battery and fuel line. The battery charger is then to be connected to the supply mains.

5. After charging, disconnect the battery charger from the supply mains. Then remove the chassis connection and then the battery connection.

6. Do not charge a leaking battery.

7. Do not use chargers for works other than those for which they are designed.

8. Before charging, ensure your charger is matching the local AC supply.

9. The charging device must be protected from moisture.

10. Do not use the charging device in the open.

11. Do not short out the contacts of battery or charger.

12. Respect the polarity "+/-" when charging.

13. Do not open the unit and keep out of the reach of children.

14. Ensure that the connection between the battery charger and battery is correctly positioned and is not obstructed by foreign bodies.

15. Keep battery charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.

16. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.

17. Do not recharge non-rechargeable batteries.

18. Longer life and better performance can be obtained if the battery

pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 4.5°C, or above 40.5°C. This is important as it can prevent serious damage to the battery pack.

 
19. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.



## IN THE BOX

Number	Parts	Number	Parts
1	Fan shroud	7	DC socket
2	Tilt locker	8	Battery Pack Release Button
3	Leg pad	9	Battery pack
4	Support leg	10	Hang hook
5	Top handle	11	AC adaptor
6	Control switch	12	Battery pack charger

## Product Introduce

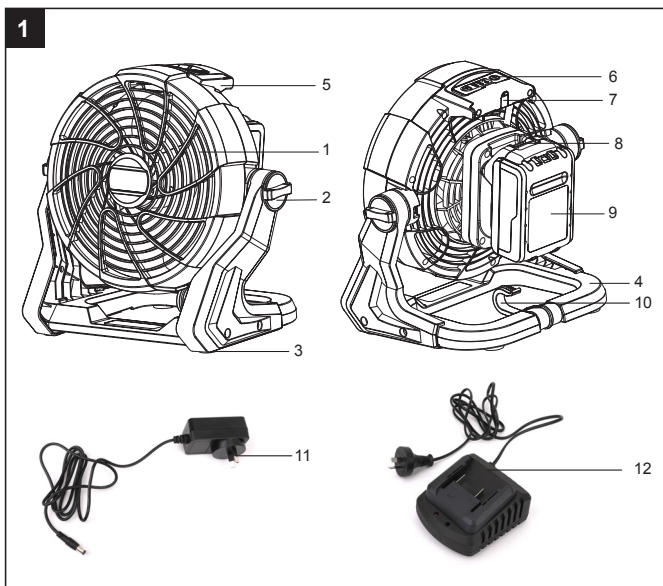

## OPERATION INSTRUCTION

Note: Before using this fan, read the instruction book carefully.

### 1. Battery pack

1) Before the fan work, press the "on" button to activate battery pack and you will see battery pack power indicator.

## 2) Charging

BEFORE PUTTING INTO OPERATION CHARGING THE BATTERY PACK  
NOTE:

- a. The battery in your new fan is not fully charged when it leaves the factory. Therefore it must be fully charged before using the first time.
- b. Do not use any charger other than that specifically provided for use with the equipment
- c. If the battery pack is very hot you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.
- d. Please charge the battery to reach full or no less than half charge before storage. If this fan will not be used for long periods of time, charge the battery every 3 months.

Charging procedure:

To charge the battery pack (9), it must be removed from this fan.

To release the battery pack:

- a. Press the battery pack release button (8) and gently slide the battery pack off (See Fig A1)
- b. Slide the battery pack into place ensuring the battery terminals and the charge terminals make a good connection (See Fig A2), plug the battery pack charger (12) into a 240V socket. After a few seconds delay the LED (12.1) will turn red, which shows the battery pack is being charged.
- c. When the battery pack charger is fully, the LED (12.2) will turn green.
- d. Disconnect battery charger from the power supply.

Caution: Do not pull the plug out the power supply by pulling on the cord.

- Make sure to grasp the plug when removing from power supply to avoid damaging the cord.
- If the indicator lights fail to illuminate during the charging cycle, unplug the charger from the power supply socket outlet and replace the battery pack.

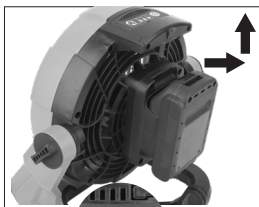 


FIG A1



8

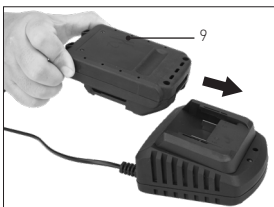 


FIG A2



12.1

12.2

e. Remove the battery pack from the battery charger.

- Supporting the battery charger with hand, pull out the battery pack from the battery charger.
- Make sure to grasp the plug when removing from power supply to avoid damaging the cord.

Caution: When the battery charger has been continuously used, the battery charger will be hot. Once the charging has been completed, turn off for 15 minutes until the next charge. If the battery pack is charged when it is warm due to battery use or exposure to sunlight, the battery pack will not be recharged. In such a case, let the battery pack cool before

recharging. If the red indicator flickers rapidly at 0.2 - second intervals, turn off from power supply and check for and take out any foreign objects in the charger's battery slot. If there are no foreign objects, it is probable that the battery pack or charger is malfunctioning. Allow battery/charger to normalise and try again. If a fault remains after trying this then contact your local BCF store.

Battery pack efficiency and charging advice

- a. Recharge the battery packs before they become completely exhausted.
- b. When you feel that the power of the fan becomes weaker, stop using the fan and recharge the battery pack. If you continue to use the tool and exhaust the electric current, the battery pack may become damaged.
- c. Avoid recharging at high temperatures. A rechargeable battery pack will be hot immediately after use. If such a battery pack is recharged immediately after use, its internal chemical substance will deteriorate and the battery life will be shortened. Leave the battery pack and recharge it after it has cooled for a while.
- d. The battery pack should only be used and/or charged when battery pack temperature is between 5°C and 30°C.
- e. The battery pack needs to be warmed-up or cooled down in order to prevent damage to the batteries internal components.

Note: Failure to warm up or cool down a battery pack could result in serious damage to the battery, charger and user.

## 2. DC socket

Power supply can be with AC adaptor or battery pack. While DC socket

supply power, the battery pack stop working. Before using DC socket, draw out the rubber cap first.

### 3. AC adaptor

When use AC adaptor, insert the DC plug into DC socket, and then plug the AC pins plug into a main power supply. Make sure that the voltage rating of the main power supply corresponds with that of the adaptor.

### 4. Carrying handle

Carry the fan using the top handle.

### 5. Hang hook

The built-in hang hook telescope out of the back leg and can be used to suspend this fan.

### 6. Tilt locker

Turn two tilt lockers counterclockwise loose the fan, then tilt fan it your need. Before use turn tilt lockers clockwise to lock tilt angle.

### 7. Support leg

Support leg can to set the fan on flat or down the flat.

### 8. Control switch

Depress the control switch knob “” to select high speed or low speed running.

## CAUTIONS

1. Do not put your fingers through the fan shroud when the fan is on.
2. Due to the 18V battery, please don't expose the fan to sunlight for a long time.
3. DO not use this fan near fire or in wet places.

4. Never use water or chemical cleaners to clean the fan. Wipe clean with a dry cloth. Always store the fan in a dry place.
5. Do not remove rubber cap from this fan! When do not use DC socket, always using rubber cap on socket, it is prevent dust into DC socket.
6. Please charge 18V battery at least every three months to extend the battery life span.

## **MAINTENANCES**

1. Store this fan, instruction manual and accessories in a secure, dry place. In this way you will always have the information ready.
2. Keep this fan unclogged and clean at all times.
3. Remove dust and dirt regularly. Cleaning is best done with a soft cloth or brush.
4. Never use caustic agents to clean plastic parts

**CAUTION:** Do not use cleaning agents to clean the plastic parts of the fan. A mild detergent on a damp cloth is recommended. Water must never come into contact with the fan.

## SPECIFICATIONS

Blade Size		18cm
Voltage		DC 18V or AC 230-240V
AC Adaptor (Model: MX24W1-1202000S)	Input	100-240VAC, 50-60Hz, 0.7A
	Output	12Vdc, 2A
18V Battery Charger	Input	100-240VAC, 50-60Hz, 65W
	Output	21Vdc, 2.3A
Battery Pack Model		BL1820-HF
18V Battery Capacity		2000mAh
18V Battery Charging Time		1.5h
Three Fan Speed Settings		Low: 10h/Mid: 5.5h/ High: 3.5h
Battery Pack Indicator	Red light during charging	
	Green light when charging is full	
Speed RPM	Low: 1200r/min	
	Mid: 1500r/min	
	High: 1700r/min	
Working Temperature		-10°C to +40°C
Storage Temperature		-20°C to +65°C
Product Size:		282x202x259mm
Weight		1.05kg without battery pack

### Warning!

- The fan can only be used with the unit provided, especially the adapter, charger and battery packs, other units may cause great danger.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the appliance before being charged.
- If the appliance is to be stored unused for a long period, the batteries are removed.
- The supply terminals are not to be short-circuited.



## WARRANTY

Our product is guaranteed to be free from quality and manufacturing defects for a period of 12 months.

If your product becomes defective during this period, SRGS PTY LTD will offer you either a replacement, credit or refund where a product is faulty; wrongly described; different from the sample shown to you or do not do what they are supposed to do.

This warranty will not cover substantially modified product; misuse or abuse of the product contrary

to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim the warranty, take the product to the front Service Desk of your nearest store of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. For online store purchases, SRGS PTY LTD will pay for the return freight for any product assessed as having a major failure.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by SRGS PTY LTD, 6 Coulthards Avenue, Strathpine QLD 4500, Australia. Phone: 1300 880 764.





W a n d e r e r 



PLU: 690015  
CODE: CPFK-18V  
DESC: 18V RECHARGEABLE FAN WANDERER  
Manufactured & packaged for  
SRGS PTY LTD  
ABN 23 113 230 050  
6 Coulthards Avenue, Strathpine QLD 4500, Australia  
MADE IN CHINA