

# User Manual

## Outdoor Activity Powerbank PB-NRG10K-337

### WHAT'S IN THE BOX:

- Powerbank
- USB-C to USB-C charging cable
- Carabiner
- User manual

### OVERVIEW

#### USB-A port (OUT)

For charging your other devices.


#### USB-C port (IN/OUT)

For charging the powerbank and your other devices.


#### Power button

Press to see remaining battery capacity.  
Press and hold to turn on the flashlight. Then press to change brightness low/medium/high and SOS flashing. Hold down again to turn off the light.

**I** A USB charger is required to charge the powerbank. This can be a wall charger, a car USB charger or any USB-powered port.

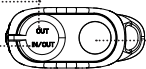

Flashlight

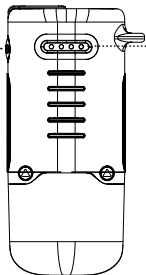

Remaining battery capacity indicator

**Warning:** The included carabiner is designed solely for holding the powerbank. Do not use it for climbing or other outdoor activities. Misuse of the carabiner may lead to injury or damage.

### SPECIFICATIONS

- **Capacity:** 10,000mAh (37Wh)
- **Power - input (USB-C):** 5V/3A, 9V/2A, 12V/2.5A, 15V/2A, 20V/1.5A
- **Power - output:**
  - **USB-C:** 5V/3A, 9V/2A, 12V/2.5A, 15V/2A, 20V/1.5A (30W Max.)
  - **USB-A:** 5V/3A, 9V/2A, 12V/1.5A (18W Max.)
  - **Total (USB-C + USB-A):** 15W
- **IP rating:** IP64
- **Operating temperature range:** 0°C to 45°C
- **Dimensions (L×W×D):** 123×62×28 mm
- **Weight:** 203 g

### SAFETY PRECAUTIONS

- Don't charge the powerbank and other devices at the same time.
- Unplug the cable when your device is fully charged. Also, when the powerbank is full, disconnect the cable.
- Use the powerbank only for charging electronic devices.
- Disconnect when not using it.
- Keep away from extreme temperatures, direct sunlight and water.
- Protect from physical damage.
- Don't take apart or change the power bank.
- Follow local laws for disposing and recycling batteries; don't toss it in regular bins.