

ASSEMBLY INSTRUCTIONS








W a n d e r e r 

DASH TENT 8 PERSON




PLU: 692143

PARTS LIST:

DESCRIPTION	PIC	QTY.
Flysheet		1
Inner Tent		1
Divider		1
Pole A		1
Pole B		2
Pole C		1
Steel Peg		15

SET UP INSTRUCTIONS

①

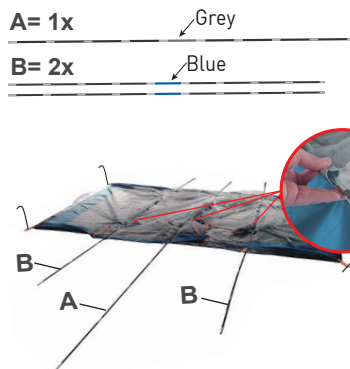

1. Take out the inner tent and lay it out flat ensuring the door is completely zipped closed. steel pegs to secure tent to the ground.
2. Assemble the fibreglass poles.
3. Insert fibreglass poles (A) and (B) into the specified channels.

②



1. Install parallel poles, pushing the first pole in order to create an arch, Secure one end of each pole to a corner pin. Attach the G hooks to the poles.
2. Operate the 2nd and 3rd rod in the same way. Attach the G hooks to the poles.
3. Install the divider, its left and right sides are not symmetrical, pay attention to the corresponding blue circle and rod.

③



1. Cover the inner tent with flysheet, Hook the three hooks on the back to the bottom loop.
2. Insert fibreglass pole (C) into the specified channels, On the inside wall of flysheet, Secure the pole in the same way.
3. Fix the tie on the fly to wrap the poles to secure the fly.
4. Use the guy ropes and steel pegs to secure the assembled tent to the ground.

Warning

Before using the tent for the first time, it is recommended to check all components have been included and you become familiar with the assembly of the tent by reading through the instructions first.

- DO NOT set up near open flame. The fabric will burn if left in continuous contact with any flame source.
 - DO NOT use any form of flame or fuel burning appliances, heaters, candles or matches inside or under the canopy of the tent.
 - Ensure your site is free from any objects and obstructions by checking the area and clear away any rocks, tree branches or any sharp objects prior to setting up your tent.
 - Keep away from any overhead power lines and do not set up under trees where there is the potential for either falling branches or lightning strikes to occur.
 - Tent must be securely pegged to the ground using all the peg points provided. All guy ropes attached to the tent must be used at all times to create added stability and avoid possible damage to either property or persons. It is crucial to do this anytime you have the tent up to minimize the impact of unexpected wind gusts.
 - Be cautious when handling the frame. Avoid pinching hands or fingers in any moving parts.
 - Utility hooks are designed for small hanging objects only. Do not hang any object heavier than 2kgs. Check the hook every time before use. Do not use if it comes loose!
 - Keep children away from the set up area.
 - When removing the pegs from the ground, never pull on the tent to remove. This may cause damage to either property or persons. Always pull on the peg itself.
- This tent is not designed to be a permanent or semi-permanent structure. It is designed to be used as a portable and temporary structure.

Care and maintenance

The following are some helpful tips on how to clean and properly store your tent.

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- DO NOT spray insecticides or bug repellent directly or near any fabric. This may damage the water-repellant treatment.
- Always return the tent to the carry bag after use. Be sure the tent is completely dry before storing it.
- Never store the tent wet. If the tent is wet, please take out from storage bag as soon as possible and leave spread out to dry completely before storing away.
- Due to cold air outside and warm air inside, the tent may develop condensation on the inside of the tent. This is a natural event and adequate ventilation will help minimise this.

Manufactured & packaged for SRGS PTY LTD

ABN 23 113 230 050

6 Coulthards Avenue, Strathpine QLD 4500, Australia

Made in China