




RHINO-RACK

Rhino Anchor Straps (RAS)

Important: Please read these instructions carefully prior to installation. Please refer to your fitting instruction to ensure that the bike rack is installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.

Layout

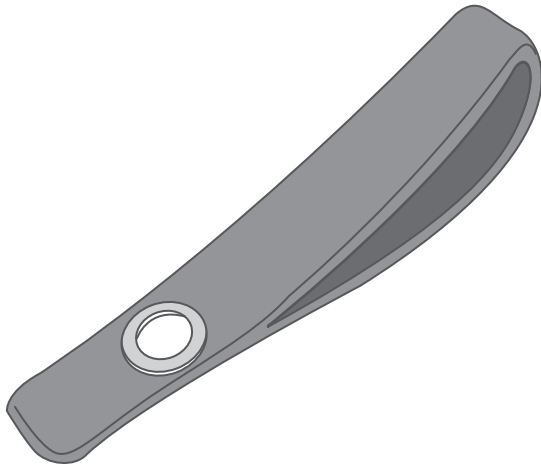

This product is designed to aid in the safety of transporting long items (i.e. Kayaks) and not to be used for towing or pulling applications. Special consideration must be taken when selecting your fixing point. Rhino-Rack Pty Ltd does not take any responsibility for damage to the vehicle that may be caused by this product on paintwork, panels and fixing hardware. Although they are designed with the softest materials in mind to minimise this damage, they cannot take into consideration the variation of panel gaps and wind flapping issues. It is the users responsibility to ensure that the strap is used in accordance with these fitting instructions.

Parts List

Item	Component Name	Qty	Part No
1	Anchor Strap	2	RAS
2	M10 Flat Washer	2	
3	Fitting Instruction	1	R224

Care Instruction: Wash and clean vehicle roof racks prior to fitment


Warning:

It is important that all roof racks and accessories are installed and attached correctly. Failure to follow the correct attachments could result in an accident, serious injury or death to others. The driver of the vehicle is responsible for securing the roof racks and accessories, checking the attachments, periodically checking bolt torque and visual inspection of all components for wear and damage. Do not attempt to fit the roof rack system or accessory to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer or retailer from where they were purchased.

Use only non-stretch fastening ropes or straps.

Note for Dealers and Fitters

It is your responsibility to ensure this fitting instruction is given to the end user or client

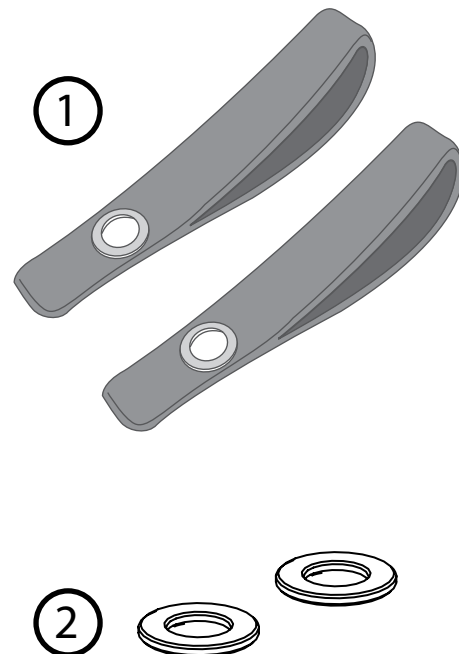

Important Information

Rhino-Rack
3 Pike Street, Rydalmere,
NSW 2116, Australia.
(Ph) (02) 9638 4744 (Fax) (02) 9638 4822









Document No: R224
Prepared By: Andy Wana
Authorised By: Chris Murty

Issue No: 01
Issue Date: 26/07/2012


These instructions remain the property of Rhino-Rack Australia Pty Ltd and may not be used or changed for any other purpose than intended.




Rhino Anchor Straps (RAS)

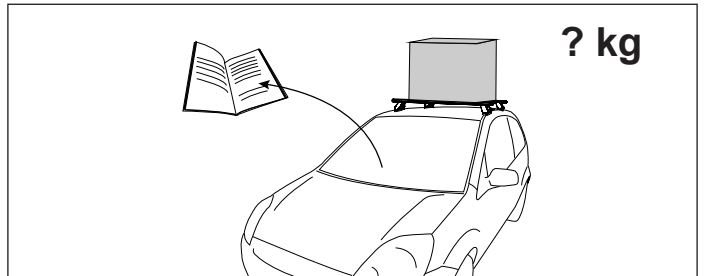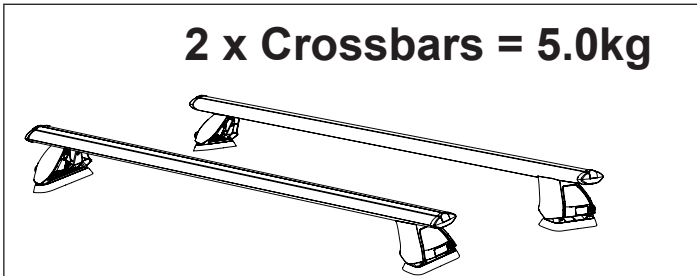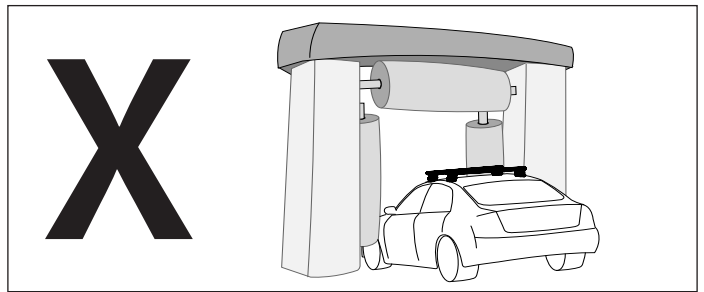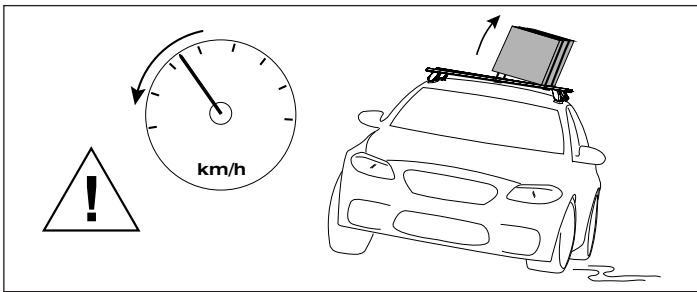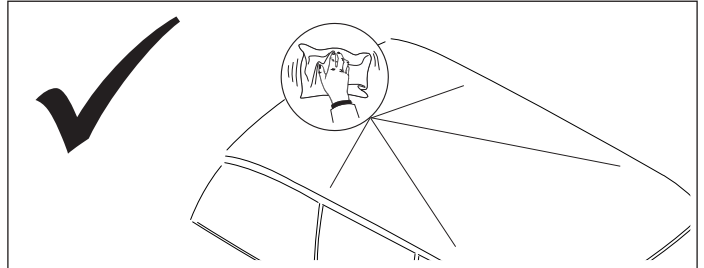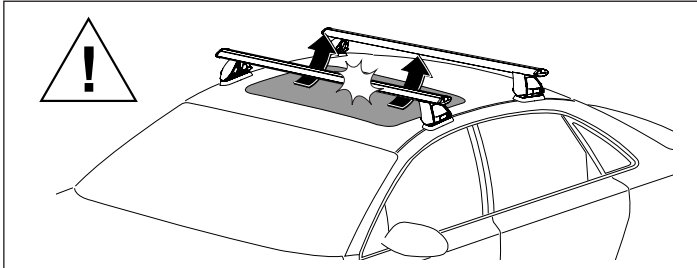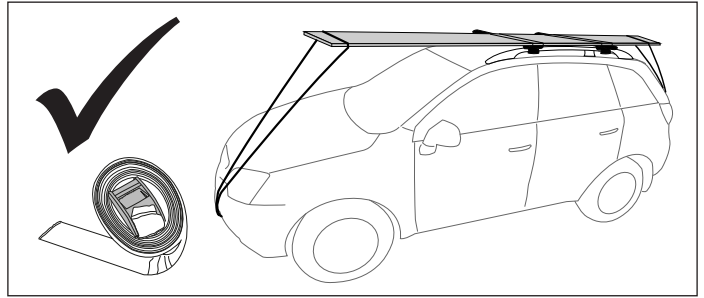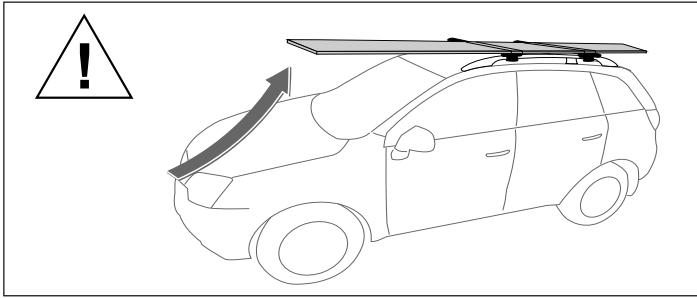

When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicles User Manual) should be **halved**. Do not forget to subtract 7.5kg from your maximum carrying capacity due to the weight of the crossbars and legs.



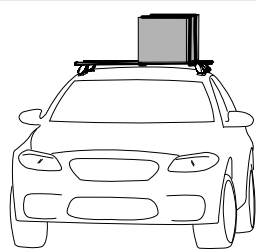


$$60\text{kg load rating (Urban road)} = 30\text{kg load rating (Off road - } 60\text{kg} / 2)$$

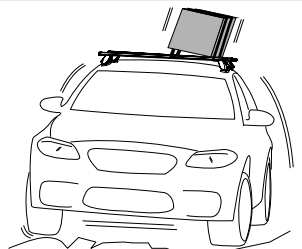

WARNING! Important Load Carrying Instructions

With utility vehicles, the cabin and the canopy move independently. Roof racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and canopy. Instead, rigidly fix to either the cabin roof racks or the canopy roof racks.

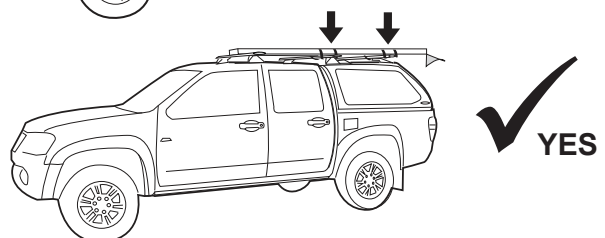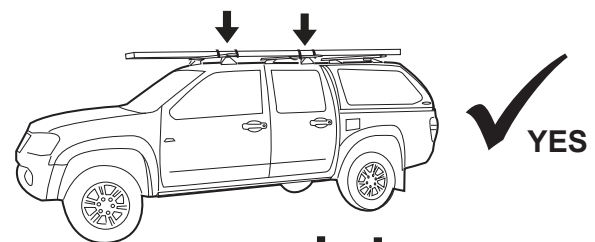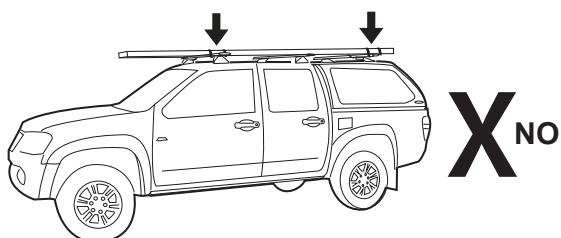




Rhino Anchor Straps (RAS)

Fitting instructions for use with Pioneer Tray


1 Open bonnet and locate bolt

Locate a bolt just back from the headlights. This bolt should not be attached to any plastic parts such as brackets for headlights, but instead only there for metal to metal securing purposes.

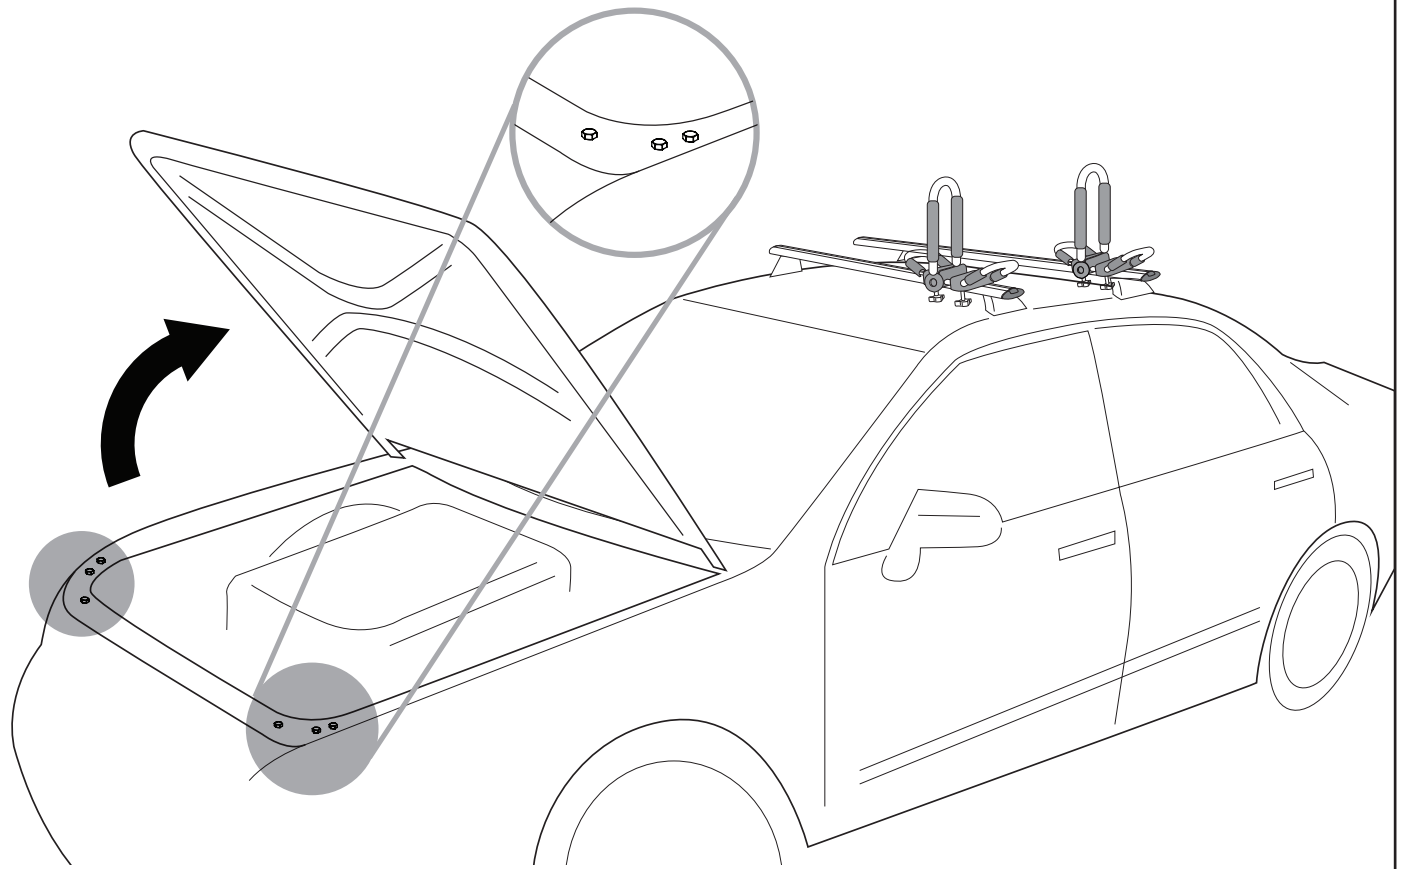


2 Remove bolt

Use a socket wrench to remove bolt

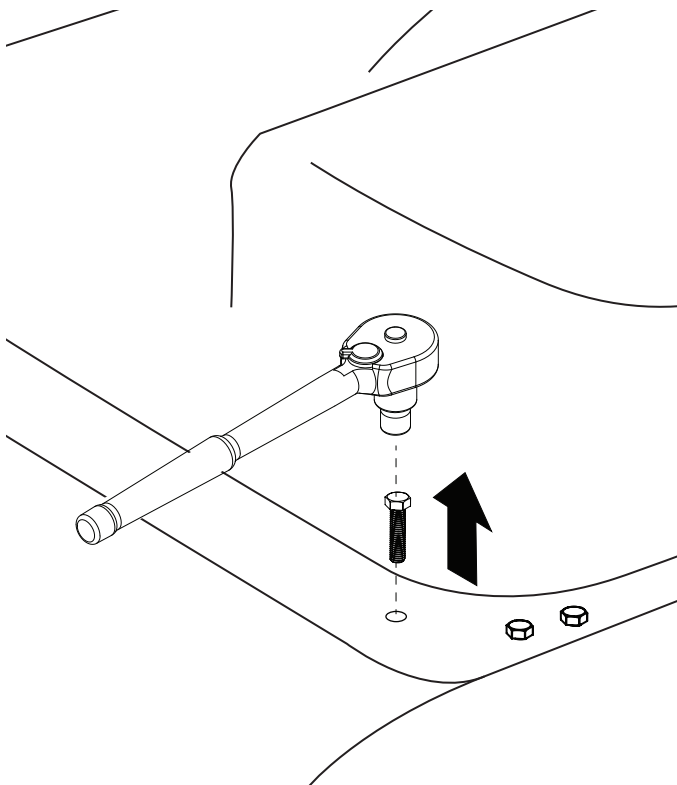

3 Install anchor straps

Install the anchor strap and washer as shown. Repeat for the second anchor strap at the other side of the vehicle.

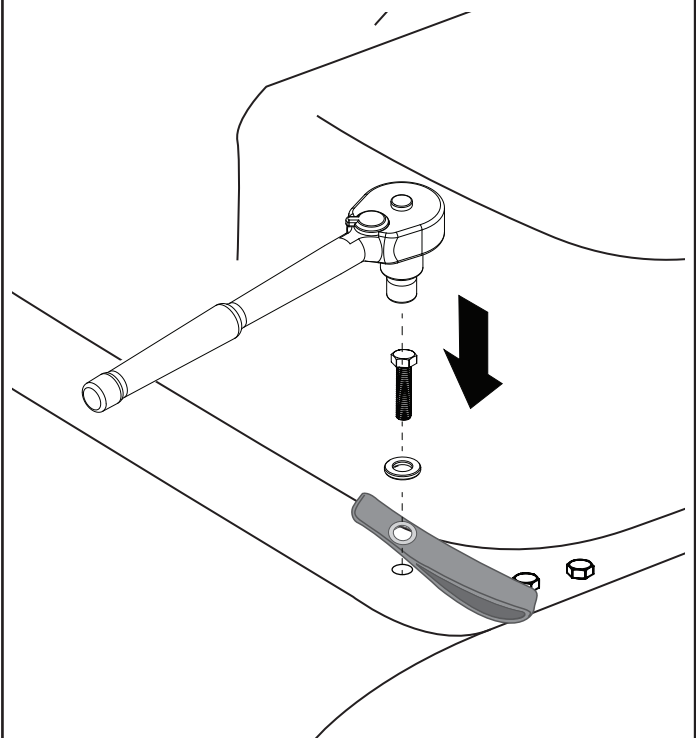




Rhino Anchor Straps (RAS)

4 Tie your load to the anchor straps

Loop your tie down straps through the anchor straps as shown. Use of metal hooks is discouraged as they may damage your vehicle.

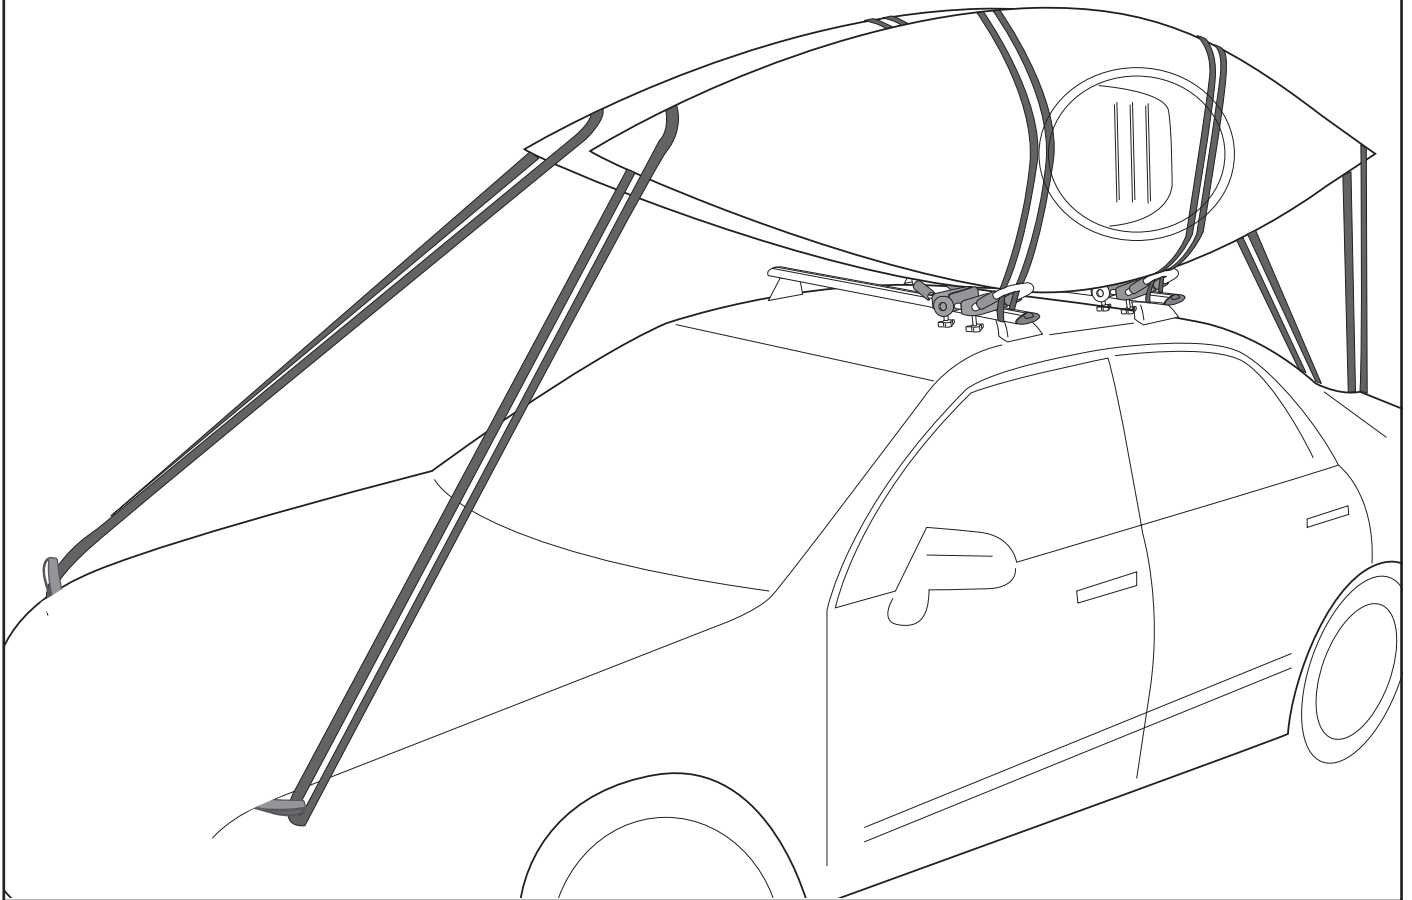

5 When not in use, fold straps over and hide them under the bonnet of the car. Avoid the straps flapping as they may cause paintwork damage.

