

**SMARTCONNECT**  
RANGE

**BM PRO**

# SMARTPRESSURE

WIRELESS TYRE PRESSURE SENSOR

PROSMART

ODYSSEY

JHUB

For use with existing  
BM PRO Systems



TEAM  
BM PRO  
.COM



Watch Video

# SMARTPRESSURE

## INSTALLING YOUR TPMS SENSORS

1. Open your app\* and navigate to the SmartPressure screen.
2. Follow the instructions in the app to pair your SmartPressure sensor.
3. On the tyre, screw on the anti-theft nut. (Fig 1)
4. Tighten the sensor. (Fig 2)
5. Screw the nut anti-clockwise to lock the sensor. (Fig 3)
6. Tighten the anti-theft nut. (Fig 4)
7. The sensor is now paired to the app and will show the current pressure of your tyre.

\*A compatible BMPRO app must be installed in your RV or on your smartphone.

SmartPressure is compatible with all devices that have Bluetooth 4.0+ Low Energy (BLE).



**WARNING:** Do not ingest battery. Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.



Fig 1

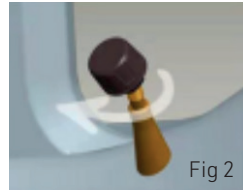


Fig 2



Fig 3



Fig 4

SmartPressure requires BMPRO's ProSmart, Odyssey or JHub systems.



9 358381 000043

