

# 4x4

4 x 4 ACCESSORIES



## 20A MPPT SOLAR CHARGE CONTROLLER

Model: Tracer2206AN

+ OWNERS/INSTRUCTION MANUAL



## IMPORTANT SAFETY INSTRUCTIONS

**Please reserve this manual for future review.**

This manual contains safety, installation, and operation instructions for the Tracer2206AN MPPT solar controller ("controller" referred to in this manual).

- Read all the instructions and warnings carefully in the manual before installation.
- No user-serviceable components inside the controller; please do not disassemble or attempt to repair the controller.
- Mount the controller indoors. Avoid exposure to the components and do not allow water to enter the controller.
- Install the controller in a well-ventilated place; the controller's heat sink may become very hot during operation.
- We suggest installing appropriate external fuses/breakers.
- Ensure to switch off PV array connections and the battery fuse/breakers before controller installation and adjustment.
- Power connections must remain tight to avoid excessive heating from a loose connection.

## 1. GENERAL INFORMATION

### 1.1 Overview

Adopting the advanced MPPT control algorithm, Tracer2206AN solar controller can minimize the maximum power point loss rate and loss time. It makes this product tracks the PV array's maximum power point and obtains maximum energy under any situation. Compared with the PWM charging method, MPPT solar controllers can increase the energy utilization ratio by 10%-30%. Charging current limit, charging power limit, and high temperature charging automatic power reduction; these functions fully ensure system stability when access to excess PV modules and high temperature running.

The Tracer2206AN controller owns a self-adaptive three-stage charging mode. It can effectively prolong the battery lifespan and significantly improve the system's performance. They are equipped with comprehensive electronic protections to ensure the solar system more reliable and more durable. This controller can be widely used for RV, household systems, field monitoring, and many other applications.

## Features:

- Advanced MPPT, with efficiency no less than 99%
- Ultra-fast tracking speed and guaranteed tracking efficiency
- Advanced MPPT control algorithm to minimize the MPPT rate and loss time
- Accurate recognizing and tracking technology of multi-peaks maximum power point
- Maximum DC/DC conversion efficiency of 98%
- Automatic limitation of the charging current and charging power
- Wider MPPT working voltage range
- Support the lead-acid and lithium batteries; voltage parameters can be set on the controller
- Programmable temperature compensation feature.
- Real-time energy statistics function
- High temperature charging automatic power reduction function
- Multiple load work modes
- High quality and low failure rate components of ST or IR to ensure the service life
- 100% charging and discharging in the environment temperature range
- A power protection chip, which can provide 5VDC/200mA power and over-current, short-circuit protections, is adopted by the communication interface
- Comprehensive electronic protection

## 1.2 Characteristics



Figure 1-1 Product Characteristics

|   |                   |   |                    |
|---|-------------------|---|--------------------|
| ① | SELECT button     | ⑤ | Load terminals     |
| ② | RTS interface     | ⑥ | Mounting Hole Ø5mm |
| ③ | PV Terminals      | ⑦ | ENTER button       |
| ④ | Battery terminals | ⑧ | LCD                |

★ Suppose the remote temperature sensor is not connected to the controller or damaged. In that case, the controller will charge or discharge the battery at the default temperature setting of 25 °C (no temperature compensation).

### 1.3 Maximum Power Point Tracking Technology

Due to the nonlinear characteristics of the solar array, there is a maximum energy output point (Max Power Point) on its curve. Traditional controllers, equipped with switch charging technology and PWM charging technology, can't charge the battery at the maximum power point and cannot obtain the maximum energy available from the PV array. In contrast, the solar charge controller with Maximum Power Point Tracking (MPPT) Technology can lock the point to obtain the maximum energy and deliver it to the battery.

As Figure 1-2, the curve is also the array's characteristic curve; the MPPT technology will 'boost' the battery charge current through tracking the MPP. Assuming 100% conversion efficiency exist in the solar system, the following formula is established:

$$\text{Input power (P}_{PV}\text{)} = \text{Output power (P}_{Bat}\text{)}$$



$$\text{Input voltage (V}_{Mpp}\text{)} * \text{input current (I}_{PV}\text{)} = \text{Battery voltage (V}_{Bat}\text{)} * \text{battery current (I}_{Bat}\text{)}$$

Normally, the  $V_{Mpp}$  is always higher than  $V_{Bat}$ . Due to the principle of energy conservation, the  $I_{Bat}$  is always higher than  $I_{PV}$ . The greater the difference between  $V_{Mpp}$  &  $V_{Bat}$ , the greater the difference between  $I_{PV}$  &  $I_{Bat}$ . The greater the difference between the array and the battery will also decrease the system conversion efficiency. Therefore, the controller's conversion efficiency is particularly important in the PV system.

Figure 1-2 is the maximum power point curve, whose shaded area is the traditional solar charge controller (PWM Charging Mode). It is known that the MPPT mode can improve solar PV usage. According to the test, the MPPT controller can raise 20%-30% efficiency compared to the PWM controller. (Specified value may be fluctuant due to the influence of the circumstance and energy loss.)



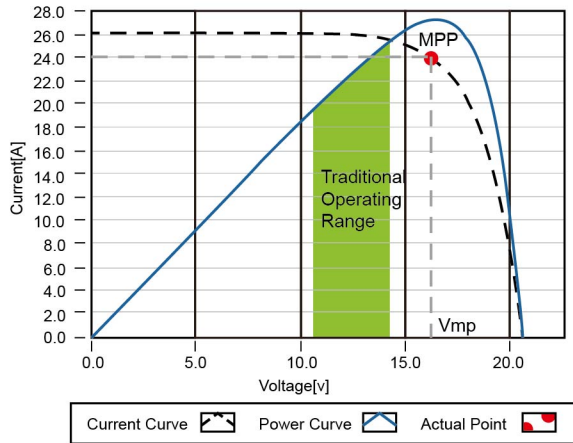


Figure 1-2 Maximum Power Point Tracking Technology

In actual application, as shading from cloud, tree, and snow, the panel may appear Multi-MPP. However, in actuality, there is only one real Maximum Power Point. As the below Figure 1-3 shows:

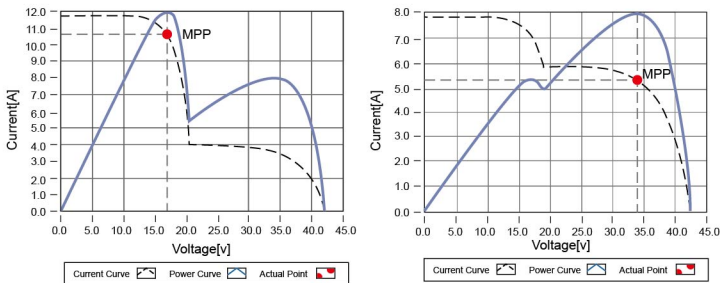


Figure 1-3 Mutil-MPP Curve

Suppose the program works improperly after appearing Multi-MPP. In that case, the system will not work on the real max power point, which may waste most solar energy resources and seriously affect the system's normal operation. The typical MPPT algorithm, can track the real MPP quickly and accurately. It can improve the PV array's utilization rate and avoid resource waste.

## 1.4 Battery charging stage

The controller has a three-stage battery charging algorithm, including Bulk Charging, Constant Charging, and Float Charging. Through the three-stage charging method, the system can extend the battery's lifespan.

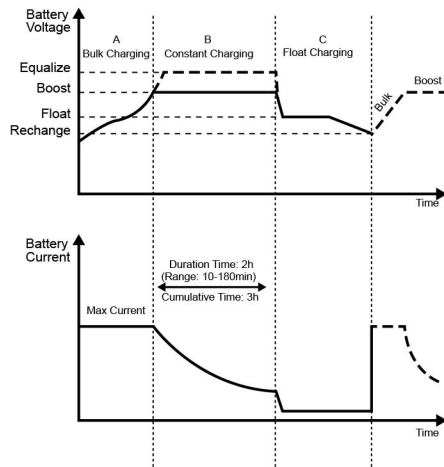


Figure 1-4 Battery charging stage curve

### A) Bulk Charging

The battery voltage has not yet reached constant voltage (Equalize or Boost Charging Voltage). The controller operates in constant current mode, delivering its maximum current to the batteries (MPPT Charging). When the battery voltage reaches the constant voltage set point, the controller will start to operate in constant charging mode.



### B) Constant Charging

When the battery voltage reaches the constant voltage set point, the controller will start to operate in constant charging mode. The MPPT charging stops during this process, and the charging current will drop gradually at the same time. Constant charging has two stages, namely, equalize charging and boost charging. These two charging processes are not repeated.

### ● Boost Charging


The default duration of the boost charging stage is generally 2 hours. Customers can also adjust the constant time and preset value according to actual needs. When the duration is equal to the set value, the system will switch to the float charging stage.

### ● Equalize Charging

|   |   |
|---|---|
| <br><b>WARNING</b> | <p>Explosive Risk! Equalizing flooded batteries would produce explosive gases, so well ventilation of the battery box is recommended.</p>   |
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>● Equipment damage!</li> <li>● Equalization may increase battery voltage to the level that damages sensitive DC loads. Verify that the load's allowable input voltages are greater than the equalizing charging setpoint voltage.</li> <li>● Over-charging and excessive gas precipitation may damage the battery plates and activate material shedding on them. Too high an equalize charging or for too long may cause damage. Please carefully review the specific requirements of the battery used in the system.</li> </ul> |

Some battery types benefit from equalizing charging, stirring electrolytes, balancing battery voltage, and accomplishing chemical reactions. Equalize charging increases the battery voltage to make it higher than the standard complement voltage, gasifying the battery electrolyte.

If the controller automatically controls the next charge for equalizing charging, the equalizing charging time is 120 minutes. Equalize charge and boost charge are not carried out constantly in a full charge process to avoid too much gas precipitation or overheating of the battery.

|   |  |
|---|--|
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>● Due to the installation environment or load work, the system may not stabilize the battery voltage at a constant voltage. The controller will accumulate the time when the battery voltage is equal to the set value. When the accumulative time is equal to 3 hours, the system will automatically switch to float charging.</li> <li>● If the controller time is not adjusted, the controller will equalize charging following the inner time.</li> </ul> |
|---|--|

### C) Float Charging

After the constant charging stage, the controller will reduce the battery voltage to the float charging preset voltage by reducing the charging current. During the floating charge stage, the battery is charged weakly to ensure that the battery is maintained in a fully charged state. In the float charging stage, loads can obtain almost all power from the solar panel. Suppose loads' power exceeds the solar array's power. In that case, the controller will no longer maintain the battery voltage in the float charging stage. When the battery voltage goes lower than the set value of the boost recharge voltage, the system will exit the float charging stage and enter the bulk charging stage again.

## 2 INSTALLATION

### 2.1 Warning

- Be careful when installing the batteries. Please wear eye protection when installing the open-type lead-acid battery and rinse with clean water in time for battery acid contact.
- Keep the battery away from any metal objects, which may cause a short circuit of the battery.
- Acid gas may be generated when the battery is charged. Confirm that the surrounding environment is well ventilated.
- Avoid direct sunlight and rain infiltration when installing it outdoor.
- Loose power connectors and corroded wires may result in high heat that can melt wire insulation, burn surrounding materials, or even cause a fire. Ensure tight connections and secure cables with cable clamps to prevent them from swaying in moving applications.
- Only charge the lead-acid and lithium-ion batteries within the control range of this controller.
- The battery connector may be wired to another battery or a bank of batteries. The following instructions refer to a singular battery. Still, it is implied that the battery connection can be made to either one battery or a group of batteries in a battery bank.
- Select the system cables according to  $5A/mm^2$  or less current density.

### 2.2 Requirements for the PV array


#### (1) Serial connection (string) of PV modules

As the core component of the solar system, the controller needs to suit various types of PV modules and maximize solar energy conversion into electricity. According to the open-circuit voltage ( $V_{oc}$ ) and the maximum power point voltage ( $V_{MPP}$ ) of the MPPT controller, the serial connection of PV modules suitable for different controllers can be calculated. The below table is for reference only.

### Tracer 2206AN:

| System voltage | 36cell<br>Voc < 23V |      | 48cell<br>Voc < 31V |      | 54cell<br>Voc < 34V |      | 60cell<br>Voc < 38V |      |
|----------------|---------------------|------|---------------------|------|---------------------|------|---------------------|------|
|                | Max.                | Best | Max.                | Best | Max.                | Best | Max.                | Best |
| 12V            | 2                   | 2    | 1                   | 1    | 1                   | 1    | 1                   | 1    |
| 24V            | 2                   | 2    | -                   | -    | -                   | -    | -                   | -    |

| System voltage | 72cell<br>Voc < 46V |      | 96cell<br>Voc < 62V |      | Thin-Film<br>module<br>Voc > 80V |   |
|----------------|---------------------|------|---------------------|------|----------------------------------|---|
|                | Max.                | Best | Max.                | Best |                                  |   |
| 12V            | 1                   | 1    | -                   | -    | -                                | - |
| 24V            | 1                   | 1    | -                   | -    | -                                | - |

|   |  |
|---|--|
| <br><b>CAUTION</b> | <p>The above parameters are calculated under the STC (Standard Test Condition)—module temperature 25°C, air mass 1.5, irradiance 1000W/m<sup>2</sup>.)</p> |
|---|--|


### 2.3 Wire size

The wiring and installation methods conform to the national and local electrical code requirements.

#### ● PV wire size

The PV array's output current varies with its size, connection method, and sunlight angle. The minimum wire size can be calculated by its ISC (short circuit current). Please refer to the ISC value in the PV module's specifications. When the PV modules are connected in series, the total ISC equals any PV module's ISC. When the PV modules are connected in parallel, the total ISC equals the sum of the PV module's ISC. The PV array's ISC must not exceed the controller's maximum PV input current. For max. PV input current and max. PV wire size, please refer to the table as below:

| Model        | Max. PV input current | Max. PV wire size |
|--------------|-----------------------|-------------------|
| Tracer2206AN | 20A                   | 6mm <sup>2</sup>  |


|   |   |
|---|---|
| <br><b>CAUTION</b> | <p>When the PV modules are connected in series, the total voltage must not exceed the max. PV open circuit voltage 46V at 25°C environment temperature.</p> |
|---|---|





### ● Battery and Load Wire Size

The battery and load wire size conform to the rated current, the reference size as below:

| Model        | Rated charge current | Rated discharge current | Battery wire size | Load wire size   |
|--------------|----------------------|-------------------------|-------------------|------------------|
| Tracer2206AN | 20A                  | 20A                     | 6mm <sup>2</sup>  | 6mm <sup>2</sup> |

|   |  |
|---|--|
| <br><b>CAUTION</b> | <ul style="list-style-type: none"> <li>● The wire size is only for reference. Suppose there is a long distance between the PV array and the controller or between the controller and the battery. In that case, larger wires can be used to reduce the voltage drop and improve performance.</li> <li>● The recommended wire is selected for the battery according to the conditions that its terminals are not connected to any additional inverter.</li> </ul> |
|---|--|

## 2.4 Mounting

|   |  |
|---|--|
| <br><b>WARNING</b> | <ul style="list-style-type: none"> <li>● Risk of explosion! Never install the controller in a sealed enclosure with flooded batteries! Do not install the controller in a confined area where battery gas can accumulate.</li> <li>● Risk of electric shock! When wiring the PV modules, the PV array may generate a high open-circuit voltage. Turn off the breaker or fuse firstly, and be careful when wiring.</li> </ul> |
| <br><b>CAUTION</b> | <p>The controller requires at least 150mm of clearance above and below for proper airflow. Ventilation is highly recommended if mounted in an enclosure.</p>   |

Installation procedures:

Step 1: Determine the installation location and heat-dissipation space

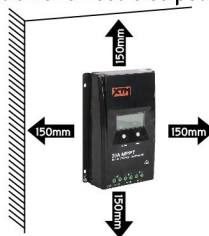





Figure2-1 Mounting

Step 2: Connect the system in the order of battery  -- load  -- PV array  following Figure 2-2, "Schematic Wiring Diagram," and disconnect the system in the reverse order.

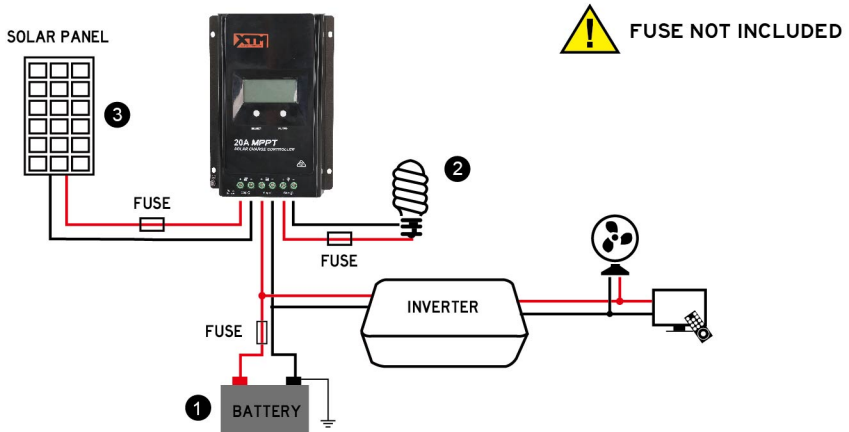


Figure 2-2 Wiring Diagram



CAUTION

- Please do not close the circuit breaker or fuse during the wiring and ensure that the leads of "+" and "-" poles are polarity correctly.
- A fuse whose current is 1.25 to 2 times the controller's rated current must be installed on the battery side with a distance from the battery no longer than 150 mm.
- If an inverter is to be connected to the system, connect the inverter directly to the battery, not to the load side of the controller.

### Step 3: Grounding

Tracer2206AN is common-negative controllers. Negative terminals of the PV array, the battery, and the load can be grounded simultaneously, or any negative terminal is grounded. However, according to the practical application, the negative terminals of the PV array, battery, and load can also be ungrounded. However, the grounding terminal on its shell must be grounded. It shields electromagnetic interference and avoids electric shock to the human body.



**CAUTION**

For common-negative systems, such as the RV system, it is recommended to use a common-negative controller. If a common-positive controller is used and the positive electrode is grounded in the common-negative system, the controller may be damaged.

#### Step 4: Connect accessories

- Connect the temperature sensor



Included Accessory


Connect one end of the remote temperature sensor to the interface.



**CAUTION**

Suppose the remote temperature sensor is not connected to the controller or damaged. In that case, the controller will charge or discharge the battery at the default 25 °C (no temperature compensation).

### 3 OPERATION

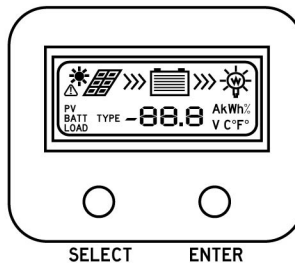








#### 3.1 Buttons





| Mode          | Note  |
|---------------|---|
| Load ON/OFF   | It can turn the load On/Off via the ENTER button in manual load mode.   |
| Clear fault   | Press the ENTER button.   |
| Browsing mode | Press the SELECT button.  |
| Setting mode  | Press the ENTER button and hold on 5s to enter the setting mode. Press the SELECT button to set the parameters. Press the ENTER button to confirm the setting parameters or no operation for 10s. It will exit the setting interface automatically. |

### 3.2 Interface

#### 1) Status Description

| Name     | Icon  | Status   |
|----------|---|--|
| PV array |  | Day  |
|          |  | Night  |
|          |  | No Charge  |
|          |  | Charging   |
|          | PV  | PV array's voltage, current, and generate energy |
| Battery  |  | Battery capacity, In charging                    |
|          | BATT.   | Battery Voltage, Current, Temperature            |
|          | BATT. TYPE  | Battery type                                     |
| Load     |  | Load ON  |
|          |  | Load OFF   |
|          | LOAD  | Current/Consumed energy/Load mode                |


#### 2) Error codes

| Status                  | Icon  | Instruction  |
|-------------------------|---|--|
| Battery over-discharged |  | Battery level shows empty, battery frame blink, fault icon blink         |
| Battery over voltage    |  | Battery level shows full, battery frame blink, fault icon blink          |
| Battery overheating     |  | Battery level shows current value, battery frame blink, fault icon blink |
| Load failure            |  | Overload <sup>①</sup> , Load short circuit                               |

① When the load current reaches 1.02-1.05 times, 1.05-1.25 times, 1.25-1.35 times, and 1.35-1.5 times more than the rated value, the controller will automatically turn off the loads in 50 seconds, 30 seconds, 10 seconds, and 2 seconds respectively.

### 3)Browse interface

Press the SELECT button to cycle display the following interfaces.

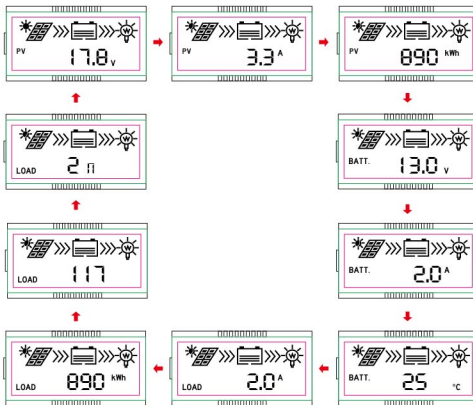

### 3.3 Setting

#### 1) Clear the generated energy

Step 1: Press the ENTER button and hold 5s under the PV-generated energy interface, and the value will be flashing.

Step 2: Press the ENTER button to clear the generated energy.

#### 2) Switch the battery temperature unit

Press the ENTER button and hold 5s under the battery temperature interface.

#### 3) Battery type

##### ① Support battery types

|   |                 |                                       |
|---|-----------------|---------------------------------------|
| ① | Battery         | Sealed (default)                      |
|   |                 | Gel                                   |
|   |                 | Flooded                               |
| ② | Lithium battery | LiFePO4 (4S/12V, 8S/24V)              |
|   |                 | Li(NiCoMn)O2 (3S/12V, 6S/24V, 7S/24V) |
| ③ | User            |                                       |




## ② Set the battery type via the LCD

Operation:

Step1: Press the SELECT button to browse the battery voltage interface.

Step2: Press and hold the ENTER button until the battery-type interface flashes.

Step3: Press the SELECT button to change the battery type, shown as below.

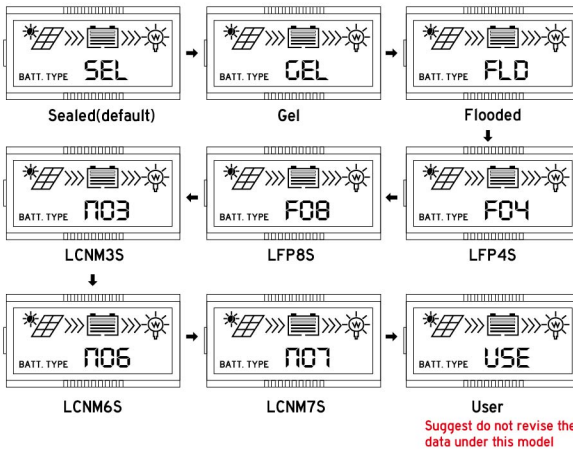

Step4: Press the ENTER button to confirm.

## ③ Operation:

Step1: On the battery voltage interface, press and hold the ENTER button to enter the battery type interface.

Step2: Press the SELECT button to change the battery type, such as selecting the "GEL"; and then press the ENTER button to confirm and back to the battery voltage interface automatically.

Step3: On the battery voltage interface, press and hold the ENTER button to enter the battery type interface again.

Step4: Press the SELECT button to change the battery type to the "USE". Under the "USE" battery type, the battery parameters that can be set via the LCD are shown in the table below:

| Parameters                              | Default | Range     | Operation Steps  |
|---|---------|-----------|--|
| System voltage level(SYS)*              | 12VDC   | 12/24 VDC | 1) Under the "USE" interface, press the ENTER button to enter the "SYS" interface.<br>2) Press the ENTER button again to display the current "SYS" value.<br>3) Press the SELECT button to modify the parameter.<br>4) Press the ENTER button to confirm and enter the next parameter. |
| Boost charging voltage(BCV)             | 14.4V   | 9~17V     | 5) Press the ENTER button again to display the current voltage value.<br>6) Press the SELECT button to modify the parameter (short press to increase 0.1V, long press to decrease 0.1V).   |
| Float charging voltage(FCV)             | 13.8V   | 9~17V     | 7) Press the ENTER button to confirm and enter the next parameter.   |
| Low voltage reconnect(LVR)              | 12.6V   | 9~17V     |  |
| Low voltage disconnect voltage(LVD)     | 11.1V   | 9~17V     |  |
| Lithium battery protection enable (LEN) | NO      | YES/NO    | Press the SELECT button to modify the switch status.<br>Note: It exists automatically from the current interface after no operation of more than 10S.  |

\* The SYS value can only be modified under the non-lithium "USE" type. That is, the battery type is Sealed, Gel, or Flooded before entering the "USE" type, the SYS value can be modified; if it is lithium battery type before entering the "USE" type, the SYS value cannot be modified.

Only the above battery parameters can be set on the local controller, and the remaining battery parameters follow the following logic (the voltage level of 12V system is 1, the voltage level of 24V system is 2).

| Battery parameters              | Battery type            |                        |                        |
|---------------------------------|-------------------------|------------------------|------------------------|
|                                 | Sealed/Gel/Flooded User | LiFePO4 User           | Li(NiCoMn)O2 User      |
| Over voltage disconnect voltage | BCV+1.4V*voltage level  | BCV+0.3V*voltage level | BCV+0.3V*voltage level |
| Charging limit voltage          | BCV+0.6V*voltage level  | BCV+0.1V*voltage level | BCV+0.1V*voltage level |
| Over voltage reconnect voltage  | BCV+0.6V*voltage level  | BCV+0.1V*voltage level | Boost charging voltage |

| Battery type<br>Battery parameters      | Sealed/Gel/Flooded User | LiFePO4 User           | Li(NiCoMn)O2 User      |
|---|-------------------------|------------------------|------------------------|
| Equalize charging voltage               | BCV+0.2V*voltage level  | Boost charging voltage | Boost charging voltage |
| Boost reconnect charging voltage        | FCV-0.6V*voltage level  | FCV-0.6V*voltage level | FCV-0.1V*voltage level |
| Under voltage warning reconnect voltage | UVW+0.2V*voltage level  | UVW+0.2V*voltage level | UVW+1.7V*voltage level |
| Under voltage warning voltage           | LVD+0.9V*voltage level  | LVD+0.9V*voltage level | LVD+1.2V*voltage level |
| Discharging limit voltage               | LVD-0.5V*voltage level  | LVD-0.1V*voltage level | LVD-0.1V*voltage level |

#### ④ Battery voltage parameters

- Measure the parameters in the condition of 12V/25°C. Please double the values in the 24V system.

| Battery type<br>Battery parameters | Sealed | GEL   | FLD   | User  |
|------------------------------------|--------|-------|-------|-------|
| Over voltage disconnect voltage    | 16.0V  | 16.0V | 16.0V | 9~17V |
| Charging limit voltage             | 15.0V  | 15.0V | 15.0V | 9~17V |
| Over voltage reconnect voltage     | 15.0V  | 15.0V | 15.0V | 9~17V |
| Equalize charging voltage          | 14.6V  | --    | 14.8V | 9~17V |
| Boost charging voltage             | 14.4V  | 14.2V | 14.6V | 9~17V |
| Float charging voltage             | 13.8V  | 13.8V | 13.8V | 9~17V |
| Boost reconnect charging voltage   | 13.2V  | 13.2V | 13.2V | 9~17V |

| Battery type<br>Battery parameters      | Sealed      | GEL         | FLD         | User           |
|---|-------------|-------------|-------------|----------------|
| Low voltage reconnect voltage           | 12.6V       | 12.6V       | 12.6V       | 9~17V          |
| Under voltage warning reconnect voltage | 12.2V       | 12.2V       | 12.2V       | 9~17V          |
| Under voltage warning voltage           | 12.0V       | 12.0V       | 12.0V       | 9~17V          |
| Low voltage disconnect voltage          | 11.1V       | 11.1V       | 11.1V       | 9~17V          |
| Discharging limit voltage               | 10.6V       | 10.6V       | 10.6V       | 9~17V          |
| Equalize Duration                       | 120 minutes | --          | 120 minutes | 0~180 minutes  |
| Boost Duration                          | 120 minutes | 120 minutes | 120 minutes | 10~180 minutes |



**CAUTION**

When the default battery type is selected, the battery voltage parameters cannot be modified. To change these parameters, select the "USE" type.

- When the battery type is "USE," the battery voltage parameters follow the following logic:
  - A. Over Voltage Disconnect Voltage > Charging Limit Voltage ≥ Equalize Charging Voltage ≥ Boost Charging Voltage ≥ Float Charging Voltage > Boost Reconnect Charging Voltage.
  - B. Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage
  - C. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage ≥ Discharging Limit Voltage.
  - D. Under Voltage Warning Reconnect Voltage > Under Voltage Warning Voltage ≥ Discharging Limit Voltage:
  - E. Boost Reconnect Charging voltage > Low Voltage Reconnect Voltage.

⑤ Lithium Battery voltage parameters


| Battery type<br>Battery parameters | LFP    |        | LNCM    |         |         | User* |
|------------------------------------|--------|--------|---------|---------|---------|-------|
|                                    | LFP4S  | LFP8S  | LCNM 3S | LCNM 6S | LCNM 7S |       |
| Over voltage disconnect voltage    | 14.8 V | 29.6 V | 12.8 V  | 25.6 V  | 29.8 V  | 9-17V |

| Battery type<br>Battery parameters      | LFP    |        | LNCM    |         |         |       |
|---|--------|--------|---------|---------|---------|-------|
|   | LFP4S  | LFP8S  | LCNM 3S | LCNM 6S | LCNM 7S | User* |
| Charging limit voltage                  | 14.6 V | 29.2 V | 12.6 V  | 25.2 V  | 29.4 V  | 9-17V |
| Over voltage reconnect voltage          | 14.6 V | 29.2 V | 12.5 V  | 25.0 V  | 29.1 V  | 9-17V |
| Equalize charging voltage               | 14.5 V | 29.0 V | 12.5 V  | 25.0 V  | 29.1 V  | 9-17V |
| Boost charging voltage                  | 14.5 V | 29.0 V | 12.5 V  | 25.0 V  | 29.1 V  | 9-17V |
| Float charging voltage                  | 13.8 V | 27.6 V | 12.2 V  | 24.4 V  | 28.4 V  | 9-17V |
| Boost reconnect charging voltage        | 13.2 V | 26.4 V | 12.1 V  | 24.2 V  | 28.2 V  | 9-17V |
| Low voltage reconnect voltage           | 12.8 V | 25.6 V | 10.5 V  | 21.0 V  | 24.5 V  | 9-17V |
| Under voltage warning reconnect voltage | 12.2 V | 24.4 V | 12.2 V  | 24.4 V  | 28.4 V  | 9-17V |
| Under voltage warning voltage           | 12.0 V | 24.0 V | 10.5 V  | 21.0 V  | 24.5 V  | 9-17V |
| Low voltage disconnect voltage          | 11.1 V | 22.2 V | 9.3 V   | 18.6 V  | 21.7 V  | 9-17V |
| Discharging limit voltage               | 11.0 V | 22.0 V | 9.3 V   | 18.6 V  | 21.7 V  | 9-17V |


\* The battery parameters under the “User” battery type is 9-17V for LFP4S. They should x 2 for LFP8S.



- When the battery type is "USE," the Lithium battery voltage parameters follow the following logic:
  - A. Over Voltage Disconnect Voltage > Over Charging Protection Voltage (Protection Circuit Modules (BMS)) + 0.2V;
  - B. Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage = Charging Limit Voltage > Equalize Charging Voltage = Boost Charging Voltage > Float Charging Voltage > Boost Reconnect Charging Voltage;
  - C. Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage > Discharging Limit Voltage.
  - D. Under Voltage Warning Reconnect Voltage > Under Voltage Warning Voltage > Discharging Limit Voltage;
  - E. Boost Reconnect Charging voltage > Low Voltage Reconnect Voltage;
  - F. Low Voltage Disconnect Voltage > Over Discharging Protection Voltage (BMS) + 0.2V

|   |   |
|---|---|
| <br><b>CAUTION</b> | The required accuracy of BMS is no higher than 0.2V. We will not assume responsibility for the abnormal when the accuracy of BMS is higher than 0.2V. |
|---|---|

#### 4) Local load mode setting

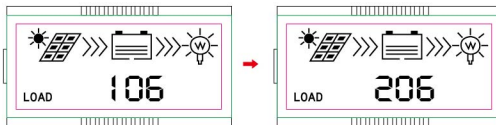

When the LCD shows the above interface, operate as follows:


Operation:

- Step1: Press the SELECT button to jump to the load type interface.
- Step2: Press and hold the ENTER button until the load type interface flashes.
- Step3: Press the SELECT button to modify the load type.
- Step4: Press the ENTER button to confirm.

#### ① Load mode



| 1** | Timer 1                                      | 2** | Timer 2  |
|-----|--|-----|--|
| 100 | Light ON/OFF                                 | 2n  | Disabled                                       |
| 101 | The load will be on for 1 hour since sunset  | 201 | The load will be on for 1 hour before sunrise  |
| 102 | The load will be on for 2 hours since sunset | 202 | The load will be on for 2 hours before sunrise |


| 1**     | Timer 1  | 2**     | Timer 2  |
|---------|--|---------|--|
| 103~113 | The load will be on for 3 ~13 hours since sunset | 203~213 | The load will be on for 3 ~13 hours before sunrise |
| 114     | The load will be on for 14 hours since sunset    | 214     | The load will be on for 14 hours before sunrise    |
| 115     | The load will be on for 15 hours since sunset    | 215     | The load will be on for 15 hours before sunrise    |
| 116     | Test mode  | 2 n     | Disabled   |
| 117     | Manual mode (Default load ON)                    | 2 n     | Disabled   |

|   |  |
|---|--|
| <br><b>CAUTION</b> | <p>When selecting the load mode as the Light ON/OFF mode, Test mode, and Manual mode, only the Timer 1 can be set; and the Timer 2 is disabled and display "2 n ".</p> |
|---|--|

## 4. OTHERS










### 4.1 Protection

| No. | Protections                       | Instruction   |
|-----|-----------------------------------|---|
| 1   | PV Over Current                   | When the actual PV array's charging current or power is higher than the controller's rated charging current or power, the controller will charge the battery per the rated current or power.  |
| 2   | PV short-circuit protection       | <p>When not in the PV charging state, the controller will not be damaged in the case of short-circuiting in the PV array.</p> <p> <b>WARNING:</b> It is forbidden to short-circuit the PV array during charging. Otherwise, the controller may be damaged.</p>                           |
| 3   | PV reverse polarity protection    | <p>When the PV array's polarity is reversed, the controller may not be damaged and resume work after the mis-wiring is corrected.</p> <p> <b>CAUTION:</b> If the PV array is reversed and its actual power is 1.5 times the controller's rated power, the controller may be damaged.</p> |
| 4   | Night reverse charging protection | Avoid the battery from discharging to the PV module at night.   |

| No. | Protections                            | Instruction  |
|-----|--|--|
| 5   | Battery reverse protection             | <p>When the polarity of the battery is reversed, the controller may not be damaged and resume normal operation after the mis-wiring is corrected.</p> <p> <b>CAUTION:</b> Limited to the characteristic of lithium battery, when the PV array connection right and battery connection reversed, the controller will be damaged.</p>   |
| 6   | Battery over voltage protection        | When the battery voltage reaches the over voltage disconnect voltage, the PV array will automatically stop charging the battery to avoid battery damage.   |
| 7   | Battery over-discharging protection    | When the battery voltage is lower than the low voltage disconnect voltage, the battery discharging is automatically stopped.   |
| 8   | Load short circuit protection          | When a short circuit occurs on the load side (which is 4 times higher than the rated load current), the controller automatically cuts off the output. The output still attempts to resume five times automatically (delay 5 seconds, 10 seconds, 15 seconds, 20 seconds, 25 seconds). Suppose you want the controller to restart the auto-recovery process. In that case, you need to press the Load button, or restart the controller, or experience a night-to-day change (night time >3 hours). |
| 9   | Overload protection                    | If the load current exceeds 1.05 times the controller's rating, the controller will cut off the output after a delay. After the overload occurs, the output attempts to resume automatically five times (delay of 5 seconds, 10 seconds, 15 seconds, 20 seconds, 25 seconds). Suppose you want the controller to restart the auto-recovery process. In that case, you need to press the Load button, or restart the controller, or experience a night-to-day change (night time >3 hours).         |
| 10  | Device overheating protection          | An internal temperature sensor can detect the internal temperature of the controller. The controller stops working when its internal temperature higher than 85 and resumes working when its internal temperature is below 75°C.   |
| 11  | TVS high voltage transients protection | The controller's internal circuitry is designed with Transient Voltage Suppressors (TVS), which can only protect against high-voltage surge pulses with less energy. Suppose the controller is to be used in an area with frequent lightning strikes. In that case, it is recommended to install an external surge arrester.   |

★ When the controller's internal temperature reaches 81°C, the charging power automatic reduction function is enabled. Temperature increases by 1°C, the charging power is reduced by 5%, 10%, 20%, and 40%. If the internal temperature is higher than 85°C, the controller stops charging the battery. When the internal temperature is not more than 75°C, the controller resumes charging per the rated charging power.

## 4.2 Troubleshooting

| Faults                               | Faults  | Troubleshooting   |
|--------------------------------------|---|---|
| PV array open-circuit                | When there is plenty of direct sunlight on the PV array, the LCD shows                                     | Confirm whether the connection of the PV array is correct and tight   |
| The battery voltage is lower than 8V | The wire connection is correct; the controller is not working   | Please check the voltage of the battery (at least 8V voltage to activate the controller)  |
| Battery over voltage                 |   Battery frame blink     | Check whether the battery voltage is higher than OVD (over voltage disconnect voltage) and disconnect the PV array connection                               |
| Battery over discharged              |   Battery frame blink     | ① When the battery voltage is restored to or above LVR (low voltage reconnect voltage), the load will recover.<br>② Take other ways to recharge the battery |
| Battery overheating                  |   Battery frame blink | Once the temperature is below 55°C, the controller will resume operation.   |
| Overload                             | 1. Load off   | ① Please reduce the number of electric devices.<br>② Restart the controller or press the button to clear faults   |
| Load short-circuit                   | 2.   Load and fault   | ① Check carefully loads connection, clear the fault.<br>② Restart the controller or press the button to clear faults  |

① When the load current goes higher than 1.02-1.05 times, 1.05-1.25 times, 1.25-1.35 times, and 1.35-1.5 times the rated value, the controller may automatically turn offloads in 50 seconds, 30 seconds, 10 seconds, and 2 seconds respectively.

### 4.3 Maintenance

The following inspections and maintenance tasks are recommended at least two times per year for good performance.

- Make sure no block on airflow around the controller. Clear up any dirt and fragments on the radiator.
- Check all the naked wires to ensure insulation is not damaged for sun exposure, frictional wear, dryness, insects or rats, etc. Repair or replace some wires if necessary.
- Verify the indicator display is consistent with the actual operation. Pay attention to any troubleshooting or error conditions. Take necessary corrective action.
- Confirm that terminals have no corrosion, insulation damaged, high temperature, burnt/discolored sign, and tighten terminal screws to the suggested torque.
- Clear up dirt, nesting insects, and corrosion in time.
- Check and confirm that the lightning arrester is in good condition. Replace a new one in time to avoid damaging the controller and even other equipment.



CAUTION

Risk of electric shock! Ensure that the power is turned off before the above operations, and then follow the corresponding inspections and operations.

## 5 SPECIFICATIONS

### Electrical Parameters

| Parameter                                       | Tracer 2206AN                          |
|---|--|
| <b>Electrical Parameters</b>                    |  |
| System rated voltage                            | 12/24VDC <sup>①</sup> Auto-recognition |
| Rated charging current                          | 20A                                    |
| Rated discharge current                         | 20A                                    |
| Controller working voltage range                | 8~32V                                  |
| Max. PV open circuit voltage                    | 60V <sup>②</sup><br>46V <sup>③</sup>   |
| MPPT voltage range                              | (Battery voltage +2V) ~ 36V            |
| PV rated charge power                           | 260W/12V<br>520W/24V                   |
| Self-consumption                                | ≤12mA                                  |
| Discharge circuit voltage drop                  | ≤0.23V                                 |
| Temperature compensate coefficient <sup>④</sup> | -3mV/°C/2V:(Default)                   |



|                                      |                                  |
|--------------------------------------|----------------------------------|
| Parameter                            | Tracer 2206AN                    |
| Grounding type                       | Common negative                  |
| LCD backlight time                   | 60S                              |
| Environmental parameters             |                                  |
| Environment temperature <sup>⑤</sup> | -25°C~+45°C (100% loads working) |
| Storage temperature                  | -20°C~+70°C                      |
| Relative humidity                    | < 95% (N.C.)                     |

- ① When a lithium battery is used, the system voltage can't be identified automatically.
- ② At minimum operating environment temperature
- ③ At 25°C environment temperature
- ④ When a lithium battery is used, the temperature compensation coefficient will be 0 and can't be changed.
- ⑤ The controller can full load working in the working environment temperature. When the internal temperature reaches 81°C, the reducing charging power mode is turned on. Refer to chapter 4.1 Protection.

#### Mechanical parameters


|                    |                  |
|--------------------|------------------|
| Model              | Tracer 2206AN    |
| Dimension          | 220x154x52mm     |
| Mounting dimension | 170x145mm        |
| Mounting hole size | Φ5mm             |
| Wire size          | 6AWG             |
| Recommended cable  | 6mm <sup>2</sup> |
| Net Weight         | 0.94kg           |

## ANNEX I CONVERSION EFFICIENCY CURVES


Test condition: Illumination Intensity: 1000W/m<sup>2</sup> Temperature: 25

Model: Tracer2206AN

1. PV array Max. power point voltage (17V, 34V)/system voltage (12V)

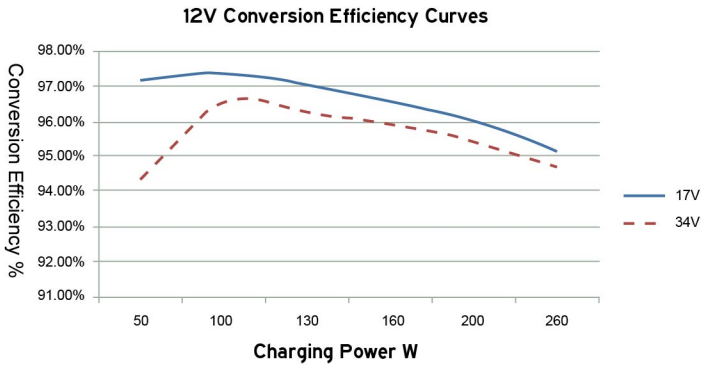

2. PV array Max. power point voltage (34V, 45V)/system voltage (24V)

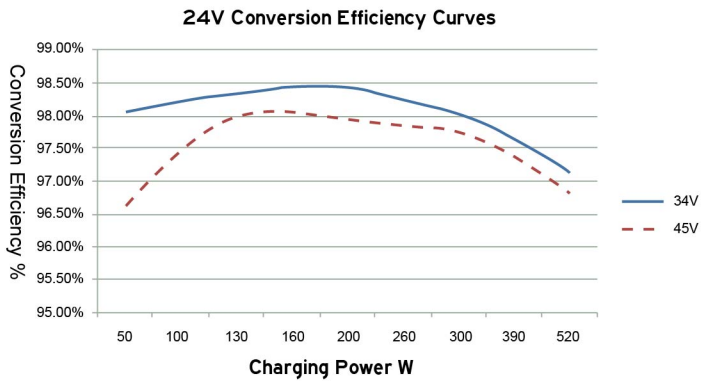

## WARRANTY

Our product is guaranteed to be free from quality and manufacturing defects for a period of 12 months.

If your product becomes defective during this period, SRGS PTY LTD will offer you either a replacement, credit or refund where a product is faulty; wrongly described; different from the sample shown to you or do not do what they are supposed to do.

This warranty will not cover substantially modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim the warranty, take the product to the front Service Desk of your nearest store of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. For online store purchases, SRGS PTY LTD will pay for the return freight for any product assessed as having a major failure.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by SRGS PTY LTD, 6 Coulthards Avenue, Strathpine QLD 4500, Australia. Phone: 1300 880 764.



PLU: 613766 CODE: TRACER2206AN

Manufactured & packaged for

SRGS PTY LTD

ABN 23 113 230 050

6 Coulthards Avenue

Strathpine QLD 4500, Australia

MADE IN CHINA